

Trainings ▾


Remove

QSK19 Engines

Disconnect the engine speed sensor connector from the engine harness.

Loosen the locknut.

Remove the engine speed sensor from the cylinder block.

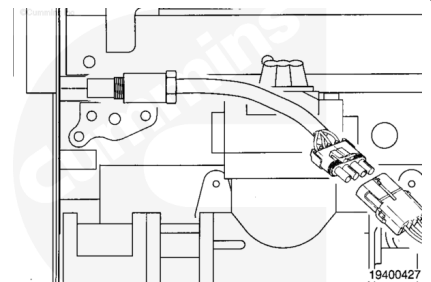


QSK23, QSK45, QSK60, and QSK78

Disconnect the sensor from the engine harness.

Loosen the jam nut from the flywheel housing.

Remove the sensor from the mounting location.

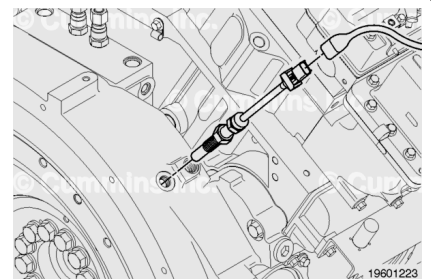


Inspect for Reuse

Inspect the engine speed sensor for debris, cracked or chipped potting, extruded potting, and damage from contact with the cam gear.

If there is debris on the engine speed sensor, clean the sensor.

If the sensor is chipped, cracked, extruded, or otherwise damaged, replace the sensor with a new sensor.

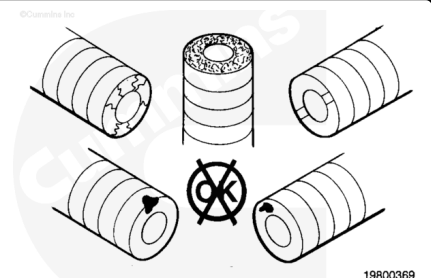

Install


QSK19 Engines

Install a new o-ring onto the engine speed sensor.


Install the new engine speed sensor into the mounting hole in the cylinder block.

Tighten the engine speed sensor with the installation tool, Part Number 3822747.

Torque Value: 20 n•m [177 in-lb]

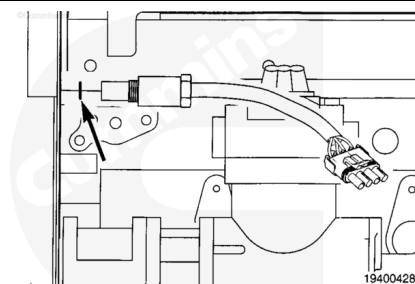

Connect the sensor to the sensor harness. Push the connectors together until they lock.

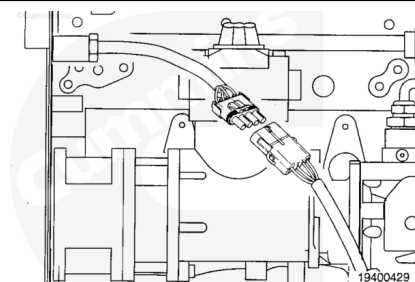

QSK23, QSK45, QSK60, and QSK78

Install the new sensor into the mounting hole until it contacts the flywheel. Back off ½ turn.

Tighten the jam nut.

Torque Value: 34 n•m [25 ft-lb]

Connect the sensor to the engine harness.

