


Fault Code: 222

Barometric Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 222 PID(P): P108 SPN: 108 FMI: 4/4 Lamp: Amber SRT:	Low voltage detected at the ambient air pressure sensor.	Possible reduced engine performance.

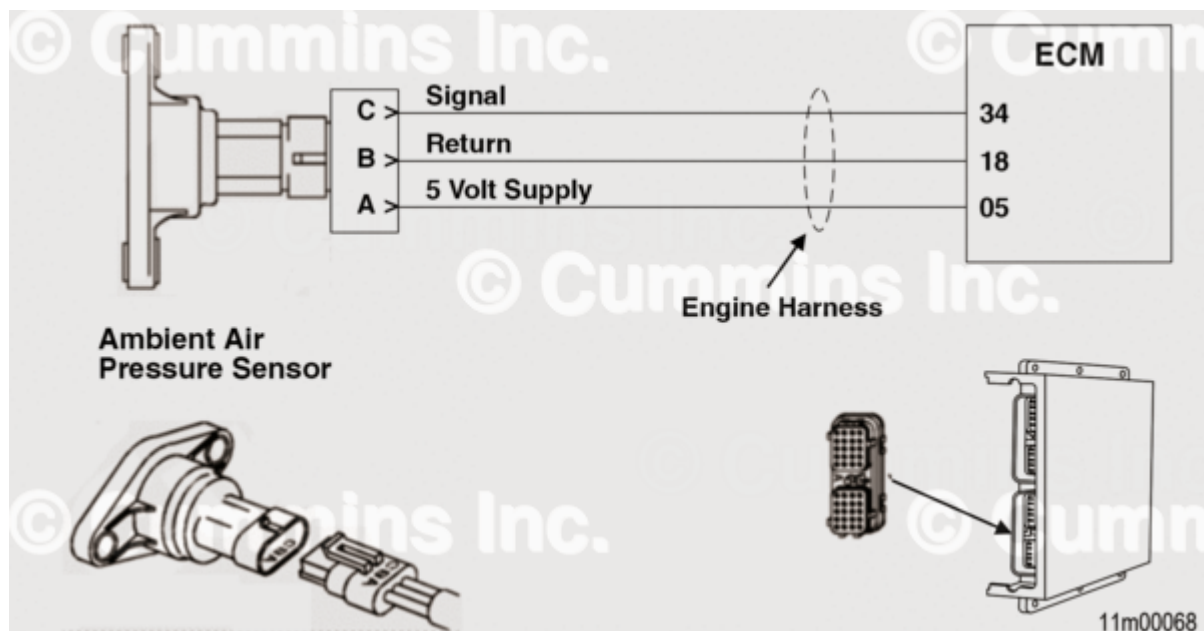

Ambient Air Pressure Sensor Circuit

Circuit Description

The ambient air pressure sensor provides the ambient air pressure signal to the ECM through the engine harness. The ECM uses the ambient air pressure sensor to adjust fueling based on the altitude.

Component Location

The ambient air pressure sensor is located below the ECM on the control valve body.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the keyswitch is in the ON position or when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the ambient air pressure signal voltage was out of range low.

Action Taken When The Fault Code Is Active

- The ECM illuminates the amber CHECK ENGINE lamp immediately when the diagnostic runs and fails.
- A default value for the ambient air pressure reading is used.

Conditions For Clearing The Fault Code

- To validate the repair, perform a key cycle, start the engine and let it idle for 1 minute.
- The fault code status displayed by the recommended Cummins® electronic service tool or equivalent will change to INACTIVE immediately after the diagnostic runs and passes.
- The ECM will turn off the amber CHECK ENGINE lamp immediately after the diagnostic runs and passes.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active and inactive faults.

Shoptalk

Possible causes of this fault code include:

- Malfunctioning or damaged ambient air pressure sensor.
- Malfunctioning or damaged engine wiring harness.

Refer to Troubleshooting Fault Code t05-222 (</qs3/pubsys2/xml/en/procedures/19/19-t05-222.html>)

