


Trainings ▾

General Information

The redundant power selector is a power distributor for both the primary and secondary power supply. Its purpose is to effortlessly switch between the primary and secondary power source to provide a constant output voltage. It can communicate with the vessel operator to notify when the power source has changed between the two sources.

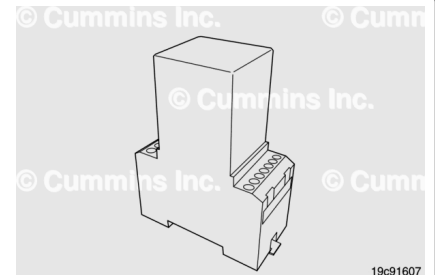


Remove

Disconnect all wires connected to the redundant power selector.

Use a flathead screwdriver to pull the latch away from the redundant power selector.

Rotate the redundant power selector upward.

Remove the redundant power selector.

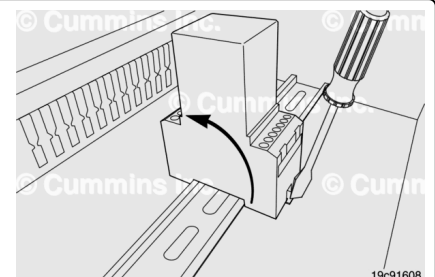


Install

Place the redundant power selector in location to be installed.

Hook the redundant power selector onto the din rail.

Rotate the redundant power selector toward the din rail and press firmly to lock the redundant power selector into position. A click will be heard when the redundant power selector locks in place.

Connect all wiring to the redundant power selector.

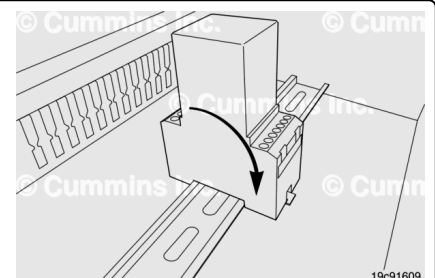

When replacing the power switch relay with the redundant power selector, the labeled wires will need to be placed in the appropriate locations. See the table below.

Redundant Power Selector Pin Numbering		
Pin Number	Description	Wire
1	Primary 24 volts direct current (VDC)	14
2	Primary 0 VDC	24
3	Not used	
4	Non used	
5	Not used	
6	Secondary 24 VDC	12
7	Secondary 0 VDC	22
11	Not used	
12	Not used	
13	Not used	
14	Not used	
15	Not used	
16	Power out 0 VDC	21
17	Power out 24 VDC	11

Wires labeled A1 and A2 will **not** be used with the redundant power selector.