


Trainings ▾

Install

Do **not** use lubricant to install the seal. The oil seal **must** be installed with the lip of the seal and the shaft clean and dry.

The yellow dust lip of the seal **must** be facing out.

Use the installation sleeve provided with the new seal to install the new seal and gasket.

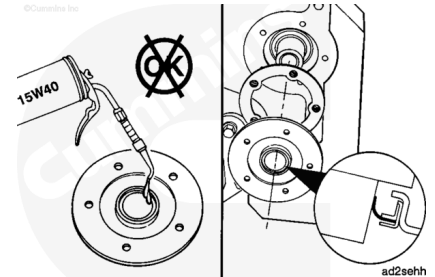

Apply a coating of thread sealant, Part Number 3823494, to the mounting capscrews.

Install the clamping ring and five capscrews.

Tighten the capscrews in a star pattern in two steps.

Torque Value:

1. 7 n•m [62 in-lb]

2. 20 n•m [177 in-lb]

Note : There is a dust seal on the outside of the clamping ring.

