


Trainings ▾

Preparatory Steps

- If equipped with an automatic belt tensioner, remove the alternator drive belt. Refer to Procedure 013-001 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-001-tr.html>)
- Remove the accessory drive pulley. Refer to Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/35/35-009-004-tr.html>)


Remove

Remove the five capscrews, clamping ring, seal, and gasket.

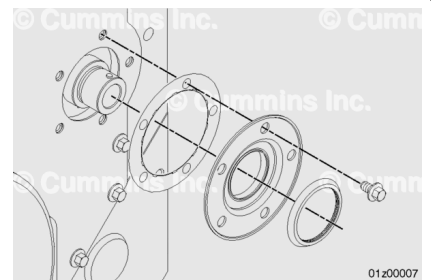

Clean

Clean the gasket surface of the gear cover.

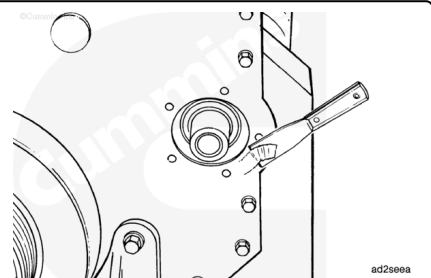


Install

Do **not** use lubricant to install the seal. The oil seal **must** be installed with the lip of the seal and the shaft clean and dry.

The yellow dust lip of the seal **must** be facing out.

Use the installation sleeve provided with the new seal to install the new seal and gasket.

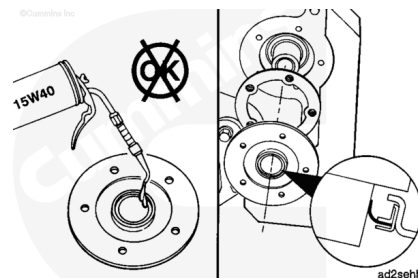

Apply a coating of thread sealant, Part Number 3823494, to the mounting capscrews.

Install the clamping ring and five capscrews.


Tighten the capscrews in a star pattern in two steps.

Torque Value:

1. 7 n•m [62 in-lb]

2. 20 n•m [177 in-lb]

Note : There is a dust seal on the outside of the clamping ring.

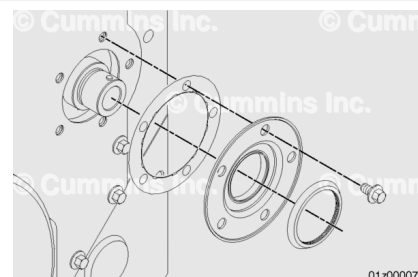

Finishing Steps

- Install the accessory drive pulley. Refer to Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/35/35-009-004-tr.html>)
- If equipped with an automatic belt tensioner, install the alternator drive belt. Refer to Procedure 013-001 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-001-tr.html>)