


Trainings ▾


Remove

The Number 4 main bearing cap has thrust bearings. The cap is located with two dowel pins.

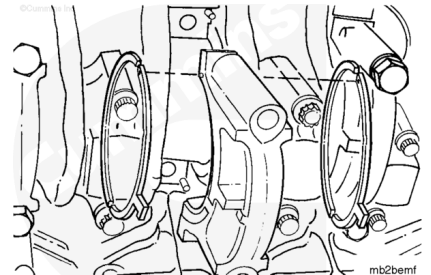

Remove the thrust bearings from the Number 4 main bearing cap.

Mark the thrust bearings in the oil passage groove as being front or rear bearings.

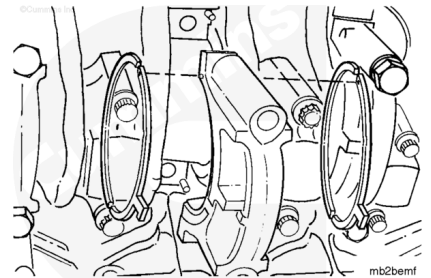

⚠ CAUTION ⚠

Do not damage the crankshaft when removing the upper thrust bearings.

Use a blunt tool to remove the upper thrust bearings.

