


## Trainings ▾

### Remove

#### With EGR

Remove the tube support bracket capscrew and bracket.

Remove the tube from the engine.

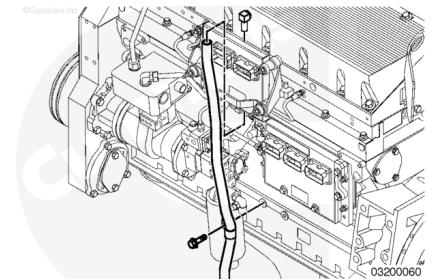

#### Without EGR

Remove the tube support bracket capscrew and bracket.

Remove the tube from the engine.

