

Trainings ▾


Install

The rocker lever assemblies **must** be installed in the engine so they are in the same position as they were removed from.

Install the assemblies on the engine.


Note : Hand-tighten the mounting capscrews. The rocker lever side clearance must be adjusted before the capscrews are tightened to their final torque value.

Rocker Lever Installation Side Clearance		
mm		in
0.50	NOM	0.020

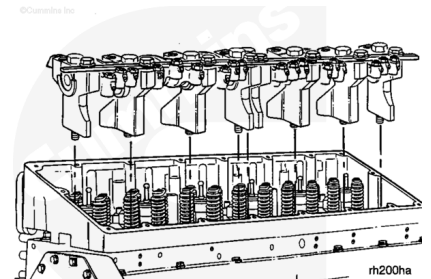

Push or use a hammer to tap the number 5 rocker lever support toward the front of the engine.


Tighten the mounting capscrews to 5 N•m [44 in-lb].

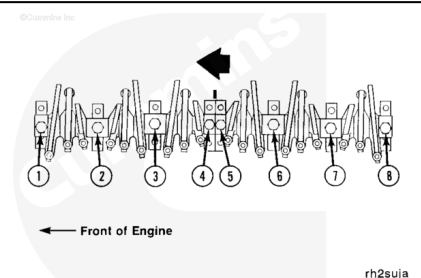

Install a 0.50 mm [0.020 in] feeler gauge between the number 5 support and the intake lever for the number 4 cylinder.

Push or use a hammer to tap the number 6 support toward the front of the engine.


Tighten the mounting capscrews to 5 N•m [44 in-lb].

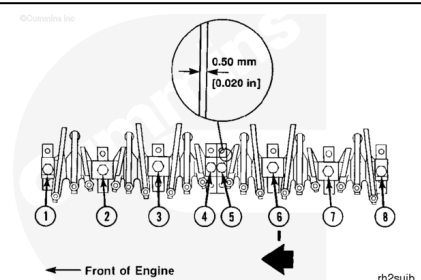

Install a 0.50 mm [0.020 in] feeler gauge between the number 6 support and the exhaust lever for the number 5 cylinder.

Push or use a hammer to tap the number 7 support toward the front of the engine.

Tighten the mounting capscrews to 5 N•m [44 in-lb].

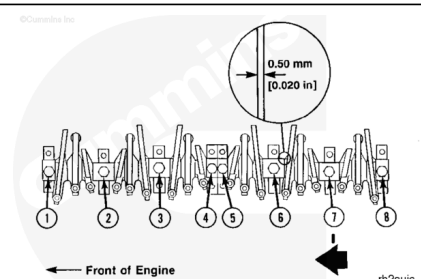


Install a 0.5 mm [0.020 in] feeler gauge between the number 7 support and the intake lever for the number 6 cylinder.

Push or use a hammer to tap the number 8 support toward the front of the engine.


Tighten the number 5, 6, 7, and 8 support capscrews to their final torque value.

Torque Value: 122 N·m [90 ft-lb]

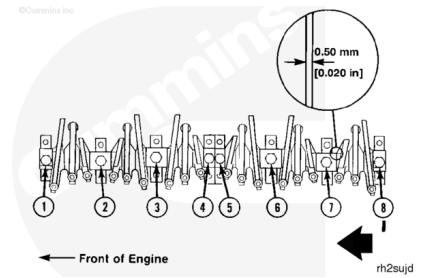

Push or use a hammer to tap the number 4 support toward the rear of the engine.


Tighten the mounting capscrews to 5 N·m [44 in-lb].

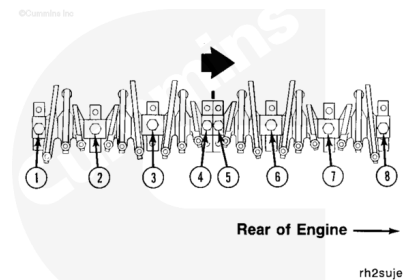

Install a 0.50 mm [0.020 in] feeler gauge between the number 4 support and the intake lever for the number 3 cylinder.

Push or use a hammer to tap the number 3 support toward the rear of the engine.


Tighten the mounting capscrews to 5 N·m [44 in-lb].

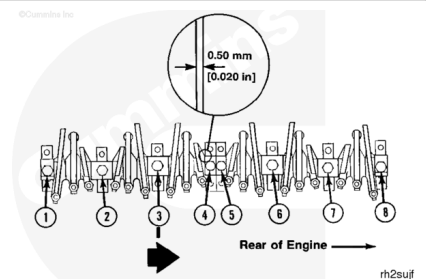

Install a 0.50 mm [0.020 in] feeler gauge between the number 3 support and the exhaust lever for the number 2 cylinder.

Push or use a hammer to tap the number 2 support toward the rear of the engine.

Tighten the mounting capscrews to 5 N·m [44 in-lb].

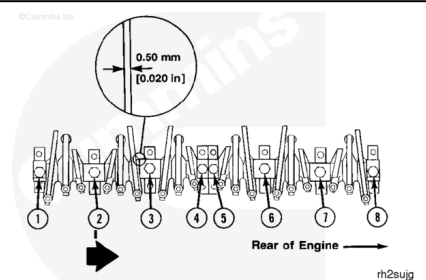


Install a 0.50 mm [0.020 in] feeler gauge between the number 2 support and the intake lever for the number 1 cylinder.

Push or use a hammer to tap the number 1 support toward the rear of the engine.

Tighten the number 1, 2, 3, and 4 support capscrews to their final torque value.

Torque Value: 122 N·m [90 ft-lb]

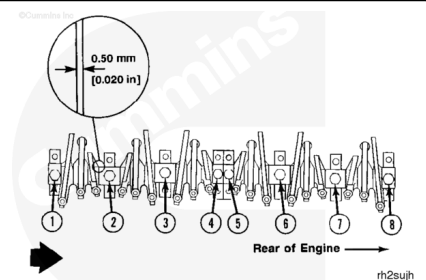

Check the front and rear assemblies for the correct clearance.
Check the support capscrews for the correct torque value.

Install the valve crossheads.

Note : The crossheads must be installed in the same location from which they were removed.

Engines Equipped with Engine Brakes:

Install the six engine brake crossheads on the exhaust valves.
Verify the actuator pins are facing the camshaft side of the engine.

Verify the crossheads are fully seated on the valve stems.

