


Trainings ▾

Remove


Remove the air piping from the intake manifold.

Remove the hose from the crankcase breather.

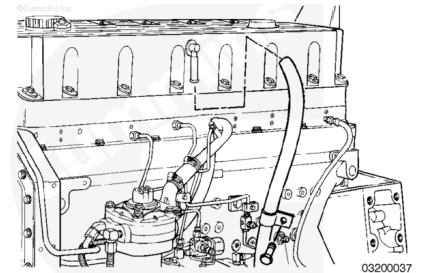

Remove the 16 capscrews and the rocker lever cover.

Remove the 16 isolators from the cover.

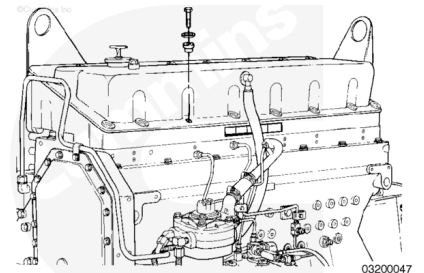


Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

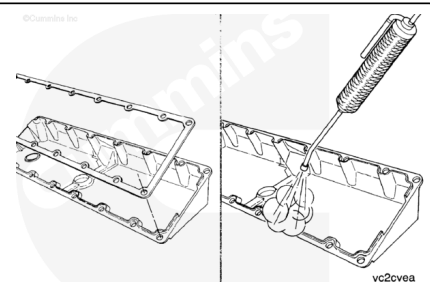

Note : The gasket can be reused if it is not damaged.

Remove the gasket and inspect for damage.


Steam clean and dry with compressed air.

Inspect the cover for cracks or damage and replace if necessary.

Inspect the isolaters for cracks, tears, or brittleness.

Inspect the capscrews for damage.


Replace the isolater and/or capscrew if damage is found.

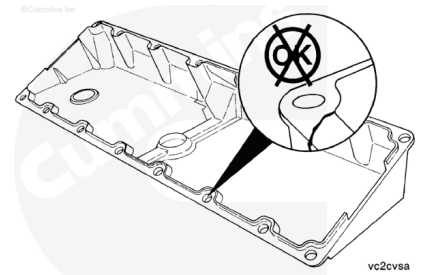

Install


If the gasket was **not** damaged, it can be used again. If the gasket was damaged, it **must** be discarded and a new one used.

Install the gasket on the cover.

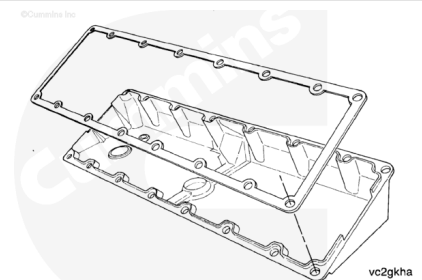


Install the cover on the rocker lever housing.

Install the 16 isolaters, spacers, and capscrews in the cover.

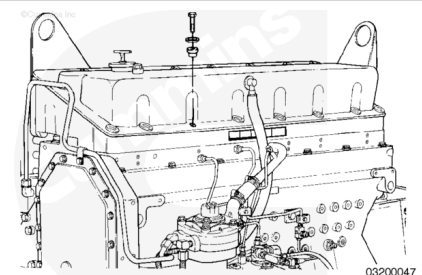


Tighten the capscrews in the sequence shown.

Torque Value: 15 n•m [130 in-lb]

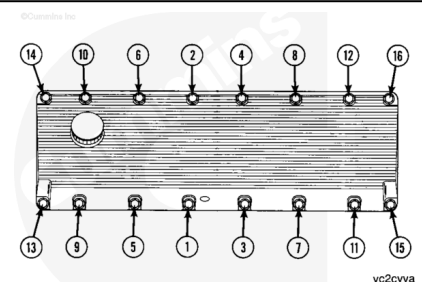

Install the hose on the crankcase breather.

Install the air piping to the intake manifold. Refer to the manufacturer's specifications for the correct torque values.

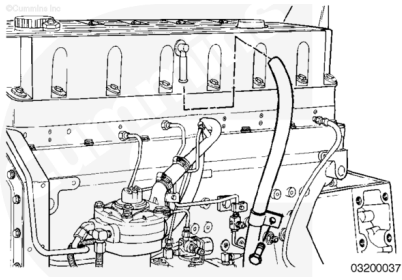

Last Modified: 01-Oct-2014
