


Trainings ▾

Install

Use clean 15W-40 engine oil to coat the ball end of the push tubes and push rods.

Note : The injector push rods (I) are smaller in diameter and longer than the valve push tubes (V).

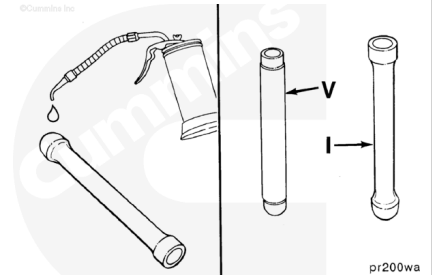

Install the valve push tubes and injector push rods.

Position the push tubes and push rods under the rocker lever adjusting screws.

Tighten the adjusting screws enough to hold the push tubes and push rods in position.

