


Trainings ▾

Install

Install the jaw coupling spider, a new mounting gasket, and fuel pump.

Install the four mounting capscrews.

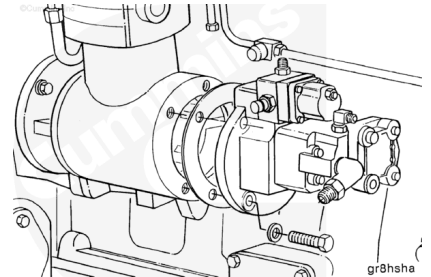


Install the two fuel pump support brackets to cylinder block bracket capscrews.

Tighten the support bracket to engine mounting capscrews.

Torque Value: 47 n•m [35 ft-lb]

Tighten the fuel pump mounting capscrews.

Torque Value: 47 n•m [35 ft-lb]

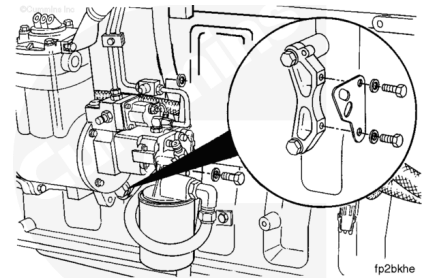

Connect the fuel plumbing.

Connect the electric wire to the shutoff solenoid.

Connect the battery cables.

Start the engine and check for leaks.

