


Trainings ▾

Remove

Clean the area around the fuel filter and the fuel filter head.

Remove the fuel filter with a filter wrench.

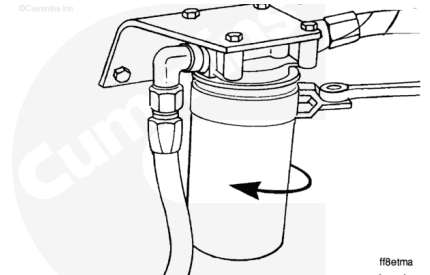

Remove the thread adapter sealing ring (1).

Use a clean, lint-free towel to clean the gasket surface on the fuel filter head.

