


Trainings ▾

Remove


Clean the area around the fuel filter and the fuel filter head.

Remove the fuel filter with a filter wrench.

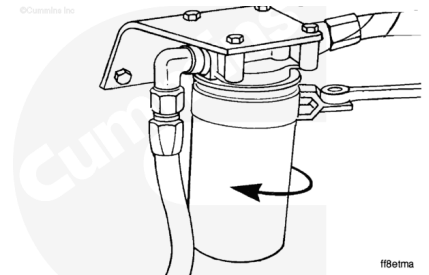

Remove the thread adapter sealing ring (1).

Use a clean, lint-free towel to clean the gasket surface on the fuel filter head.

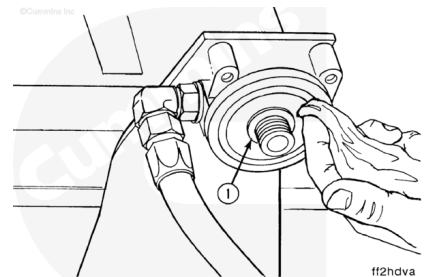

Install

Cummins Inc. requires a fuel water separator be installed in the fuel supply system.

Use the correct filter(s) for your engine as specified in the Operation and Maintenance Manual, ISM and ISMe, Bulletin 3666319. Refer to Procedure 018-024 in Section V.


(</qs3/pubsys2/xml/en/procedures/35/35-018-024-om-auto.html>)



Efficiency	Water Removed
98.7% at 10 microns	Free = 95%
96% at 8 microns	Emulsified = 95%
86% at 5 microns	


Note : A 10-micron fuel filter is required with Centinel™ equipped engines.

Install the new thread adapter sealing ring (1) supplied with the new filter.

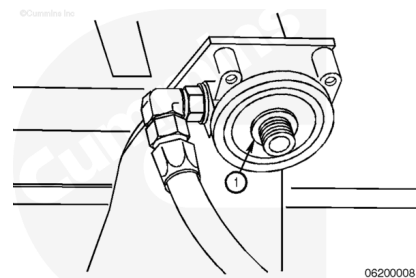

Install the filter on the filter head.

Turn the filter until the gasket contacts the filter head surface.

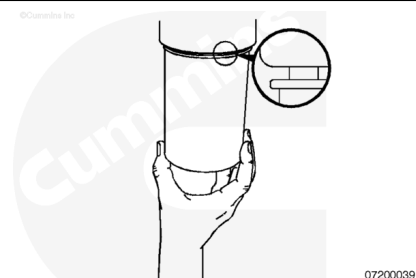

⚠ CAUTION ⚠

Mechanical overtightening of the filter can distort the threads and damage the fuel filter seal.

Tighten the filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after the gasket contacts the filter head surface, or as specified by the filter manufacturer.

