

## Trainings ▾

### Install


#### ISM Engines

##### **⚠ CAUTION ⚠**

**To reduce the possibility of injector sleeve damage, do not use anything metal to scrape the copper injector sleeves.**

Use a clean wooden stick with a clean cloth wrapped around the end to remove all the carbon from the copper injector sleeves in the cylinder head.


Use chip removing unit, Part Number 3823461 or ST-1272-11, to remove the carbon from the top of the piston.

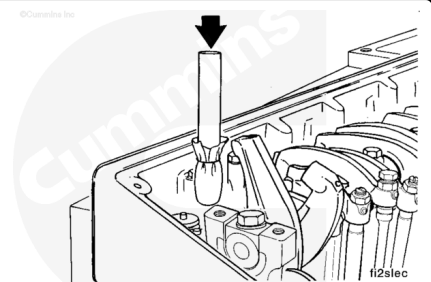

It is important that three new o-rings be installed and oriented correctly on the injector when installing the injectors.

Install three new o-rings on each injector. Do **not** twist the o-rings.

Lubricate the o-rings with clean 15W-40 lubricating oil before installation.

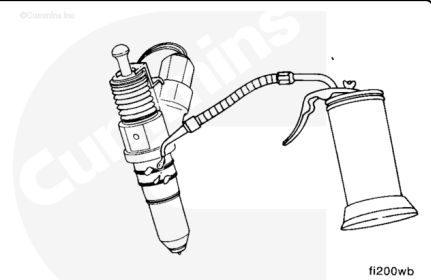


| Part Number | Location | Color Code |
|-------------|----------|------------|
| 3070136     | Top      | Red        |
| 3070137     | Middle   | White      |
| 3070138     | Bottom   | Blue       |

Lubricate the o-rings with clean 15W-40 engine oil before installation.

##### **⚠ CAUTION ⚠**

**Do not drive the injector in by striking the solenoid valve area. This can damage the solenoid or cause the injector to be out of alignment in the bore, which will result in o-ring damage.**

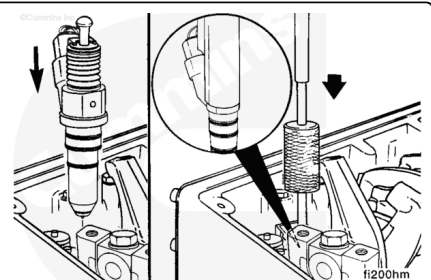


Place the injector in the cylinder head injector bore with the injector solenoid valve toward the intake port. Align the injector equally between the valve springs.

Use injector tool, Part Number 3823579, to seat the injector in the bore.

**⚠ CAUTION ⚠**

**The injector must be fully seated before installing the hold-down clamp. The hold-down clamp can not pull the injector into the bore. Engine damage can occur if the injector is not fully seated.**

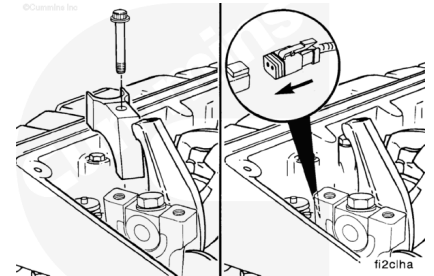

Install the injector hold-down clamp capscrew.

**Torque Value:** 75 n•m [ 55 ft-lb ]

Connect the injector wires. Make sure the wires are connected to the same cylinder from which they were removed.

Check the wire connector to make sure the connector is properly locked in position.

If the wire connector will **not** properly lock into position, refer to the electronic control system troubleshooting and repair manual.

