


Trainings ▾

Remove

⚠ CAUTION ⚠

Do not pry on the gear or pump flange. This can result in damage to the pump.

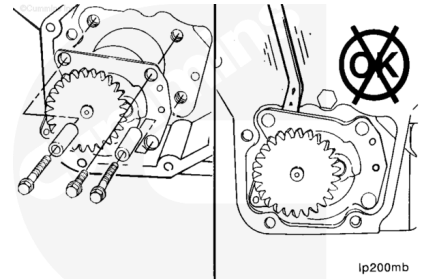

Remove the three mounting capscrews and spacers.

Use both hands to pull, or insert, two capscrews (M8 X 1.25) into the puller holes to push the pump from the engine.