


Trainings ▾

Install

⚠ CAUTION ⚠

To reduce the possibility of damage to the pulley and new belt, do not roll the belt over the pulley or pry it on with a tool.

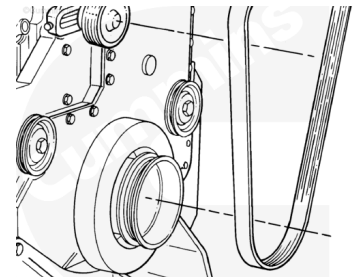


Install a new fan belt on the pulleys.

Use belt tension gauge, Part Number ST-1293, or equivalent, to measure the belt tension. Refer to Procedure 018-005 in Section V. (</qs3/pubsys2/xml/en/procedures/99/99-018-005.html>)

Turn the adjusting screw to adjust the belt tension.


Note : A belt is considered used if it has been in operation 10 minutes or longer. If used belt tension is below the minimum value, tighten the belt to the maximum value. Replace the belt if it will not maintain correct tension.

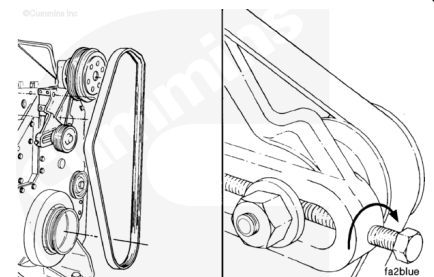

Tighten the idler pulley shaft locknut.


Torque Value: 190 n·m [140 ft-lb]

Check the belt tension again to make sure belt is **not** too tight.

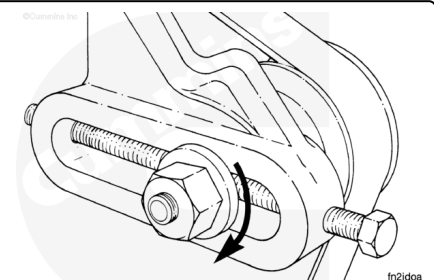

Inspect for pulley misalignment. It **must not** exceed 6 mm [0.236 in] for each meter [39.4 in] 1.6 mm for each 305 mm [1/16 inch for each 12 inches] of distance between the pulley centers.

Replace the fan idler pulley and fan hub pulley if they are **not** in alignment. Refer to Procedure 008-030 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-030-tr.html>)

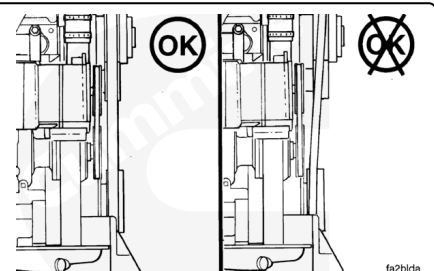

Last Modified: 01-Apr-2011
