


Trainings ▾

Remove

Disconnect the electrical wiring from the cylinder block heater, if used.

Remove any additional fittings or accessories from the housing.

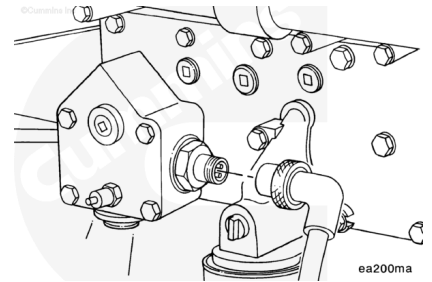

Remove the four mounting capscrews from the heater housing.

Remove the heater housing and gasket.

