


Trainings ▾

Install

Automotive with CM876

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

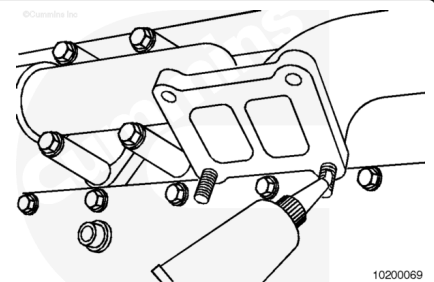

⚠ CAUTION ⚠

When installing lifting eye, make sure the shoulder of the lifting eye is bottomed against the bearing housing. Failure to do so can result in failure of lifting eye and personal injury.

⚠ CAUTION ⚠

If the lifting eye is installed in the turbocharger bearing housing, it is to be used exclusively for turbocharger removal and installation. It is not to be used in removal of the exhaust manifold, or engine. Doing so will cause damage to the turbocharger.

⚠ CAUTION ⚠

Do not rotate the turbocharger turbine housing. Loosening the turbine V-band and rotating the turbine housing may cause damage to an internal variable geometry mechanism.

⚠ CAUTION ⚠

The turbocharger actuator must not be used as a lifting mechanism. Doing so will cause damage to the turbocharger actuator.

Thread a lifting strap around the turbocharger bearing housing. Take care to **not** bend the coolant lines when lifting the turbocharger.

Care **must** be taken **not** to damage the turbocharger compressor inlet air temperature sensor, the turbocharger speed sensor, and the turbocharger actuator coolant lines when installing the turbocharger.

Install a new gasket, the turbocharger, and the four mounting nuts. Tighten the mounting nuts.

Torque Value: 88 n•m [65 ft-lb]


If installing a new turbocharger, it can be necessary to rotate the turbocharger compressor housing to properly align with the charge air cooler piping.

Rotate the turbocharger compressor housing by loosening the V-band between the turbocharger bearing housing and the turbocharger compressor housing.

Rotate the turbocharger compressor housing to properly align with the charge air cooler piping.

Tighten the V-band clamp.

Torque Value: 8 n•m [71 in-lb]

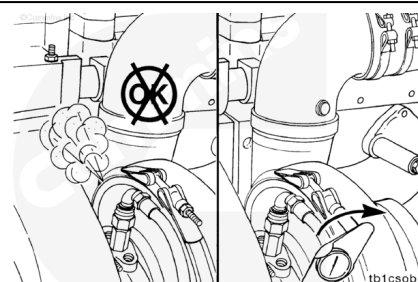

If a new turbocharger is being installed, the variable geometry turbocharger actuator from the original turbocharger **must** be reused.

Refer to Procedure 010-134 in Section 10.

(/qs3/pubsys2/xml/en/procedures/35/35-010-134.html)


If installing a new turbocharger, install the coolant inlet and outlet fittings. Refer to Procedure 010-041 in Section 10.

(/qs3/pubsys2/xml/en/procedures/35/35-010-041-tr.html)

If installing a new turbocharger, install the oil supply fitting. Refer to Procedure 010-046 in Section 10.

(/qs3/pubsys2/xml/en/procedures/35/35-010-046-tr.html)


Note : Use a ratchet and deep well socket on these fittings.

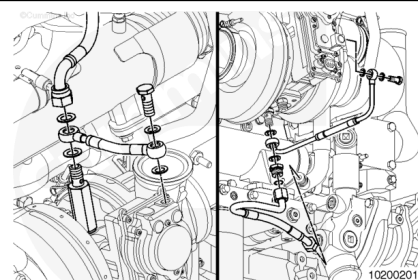

Automotive with CM875, CM870 and CM570

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

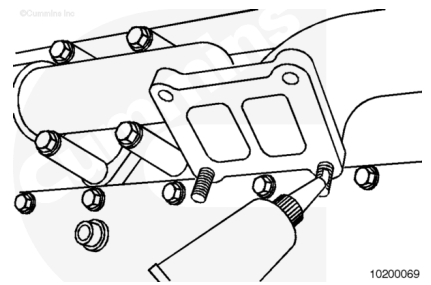

⚠ CAUTION ⚠

When installing lifting eye, make sure the shoulder of the lifting eye is bottomed against the bearing housing. Failure to do so can result in failure of lifting eye and personal injury.

⚠ CAUTION ⚠

If the lifting eye is installed in the turbocharger bearing housing, it is to be used exclusively for turbocharger removal and installation. It is not to be used in removal of the exhaust manifold, or engine. Doing so will cause damage to the turbocharger.

⚠ CAUTION ⚠

Do not rotate the turbocharger turbine housing. Loosening the turbine V-band and rotating the turbine housing may cause damage to an internal variable geometry mechanism.

⚠ CAUTION ⚠

The turbocharger actuator must not be used as a lifting mechanism. Doing so will cause damage to the turbocharger actuator.

Note : ISM CM870 and CM570 - The capscrew in the top of the turbocharger bearing housing can be removed and replaced with a lifting eye to aid in removal of the turbocharger.

Care **must** be taken **not** to damage the turbocharger compressor inlet air temperature sensor, the turbocharger speed sensor and the turbocharger actuator coolant lines when installing the turbocharger.

Install a new gasket, the turbocharger, and the four mounting nuts. Tighten the mounting nuts.

Torque Value: 88 n•m [65 ft•lb]


If installing a new turbocharger, it can be necessary to rotate the turbocharger compressor housing to properly align with the charge air cooler piping.

Rotate the turbocharger compressor housing by loosening the V-band between the turbocharger bearing housing and the turbocharger compressor housing.

Rotate the turbocharger compressor housing to properly align with the charge air cooler piping.

Tighten the V-band clamp.

Torque Value: 8 n•m [71 in-lb]

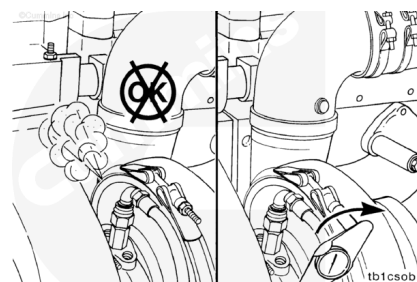


If installing a new turbocharger, install the coolant inlet and outlet fittings. Refer to Procedure 010-041 in Section 10.

(/qs3/pubsys2/xml/en/procedures/35/35-010-041-tr.html)

If installing a new turbocharger, install the oil supply fitting. Refer to Procedure 010-046 in Section 10.

(/qs3/pubsys2/xml/en/procedures/35/35-010-046-tr.html)

Note : Use a ratchet and deep well socket on these fittings.

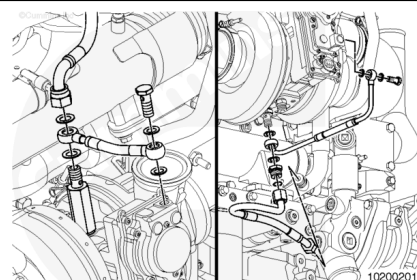


CM570 Engine Control Module

Install the wastegate actuator. Refer to Procedure 010-050 in Section 10. (/qs3/pubsys2/xml/en/procedures/35/35-010-050-tr.html)

Do **not** reuse the gasket, studs or mounting nuts. Install new studs and gasket, the turbocharger, and four new mounting nuts.

Apply a film of anti-seize compound, Part Number 3824879, or equivalent, to the turbocharger mounting studs.

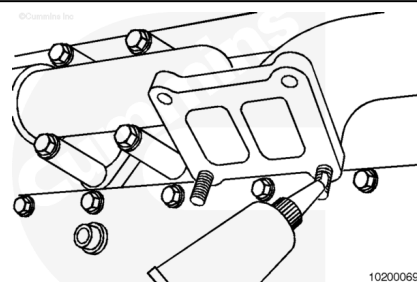

Note : Use Snap-on™ Part Number FRDHM, or equivalent crow's foot or torque wrench extension to properly tighten the mounting nut. The extension must be straight in line with the torque wrench to achieve proper torque.

Tighten the mounting nuts.

Torque Value: 61 n•m [45 ft-lb]

