

Trainings ▾

Install

Automotive with CM875, CM870 and CM570

⚠ CAUTION ⚠


Do not bend or kink hoses while tightening. Doing so may damage the line.

⚠ CAUTION ⚠

Do not use thread sealant on fittings. Doing so can possibility damage internal components.

⚠ CAUTION ⚠

Check the face of the coolant fitting on the engine and on the turbocharger to make sure o-ring is in place and is not damaged. A damaged or missing o-ring will result in a coolant leak.

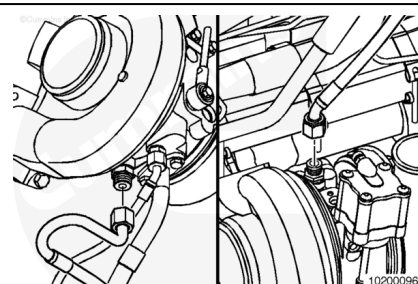

Use a second wrench to hold the coolant line coupling while tightening the line.


Install the turbocharger coolant supply line to the EGR supply and the turbocharger, and the return line to the water manifold and turbocharger.

Torque Value: 46 n·m [34 ft-lb]

Automotive with CM876

⚠ CAUTION ⚠

Do not use petroleum products on the banjo sealing washers. The sealing material will swell and cause the connection to leak.

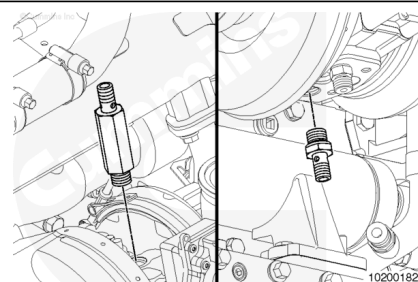

Install the coolant inlet and outlet fitting adapters into the turbocharger bearing housing.


Torque Value: 54 n•m [40 ft-lb]

Lubricate the banjo sealing washer with clean engine coolant, soapy water, or vegetable oil.



Install the banjo washers on each side of both coolant return tube ports.

Install the turbocharger actuator coolant return line (1) to the turbocharger coolant outlet fitting (2) by installing the retaining nut (3). Do **not** torque.

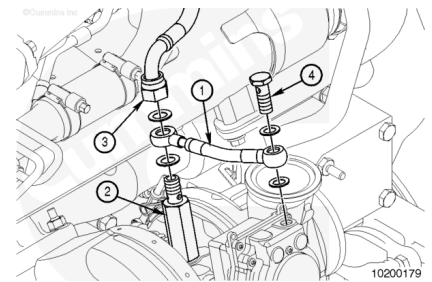

Install the banjo bolt. Tighten the banjo bolt and washers (4).

Torque Value: 24 n•m [18 ft-lb]

Tighten the turbocharger coolant outlet retaining nut (3).

Torque Value: 54 n•m [40 ft-lb]

Install the turbocharger coolant return line on top of the turbocharger and the water manifold housing.

Torque Value: 46 n•m [34 ft-lb]

⚠ CAUTION ⚠


Do not use petroleum products on the banjo sealing washers. The sealing material will swell and cause the connection to leak.



Lubricate the banjo sealing washer with clean engine coolant, soapy water, or vegetable oil.

Install the banjo washers on each side of both coolant supply tube ports.

Install the turbocharger coolant supply line to the bottom of the turbocharger bearing housing by installing the retaining nut (1). Do **not** torque.

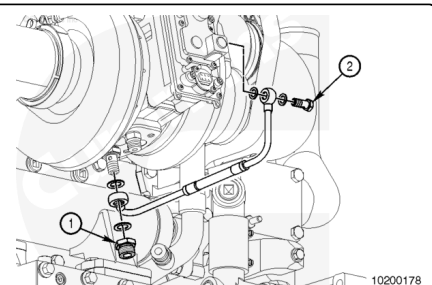

Install the turbocharger actuator coolant supply banjo bolt (2).


Torque Value: 15 n•m [132 in-lb]

Tighten the turbocharger coolant supply retaining nut (1).

Torque Value: 46 n•m [34 ft-lb]

Install the coolant supply line.

Torque Value: 46 n•m [34 ft-lb]

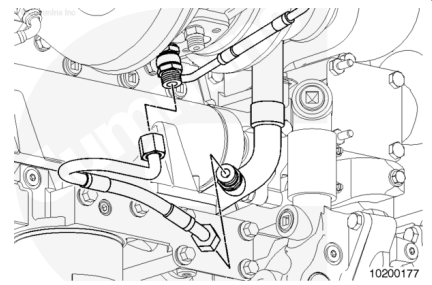

Last Modified: 01-May-2013
