

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ WARNING ⚠

Air pressure must be released from the system before removing the turbocharger control shutoff valve. The turbocharger control shutoff valve is under pressure and can cause personal injury.

©Cummins Inc.




ck800wa

Remove or disconnect the following:

- Turbocharger control shutoff valve filter head. Refer to Procedure 010-115 (</qs3/pubsys2/xml/en/procedures/35/35-010-115-tr.html>).

Remove


Remove the turbocharger control shutoff valve filter head mounting bracket.

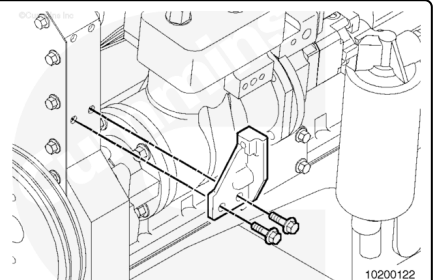

10200122

Inspect for Reuse


Check turbocharger control shutoff valve filter head mounting bracket for signs of damage.

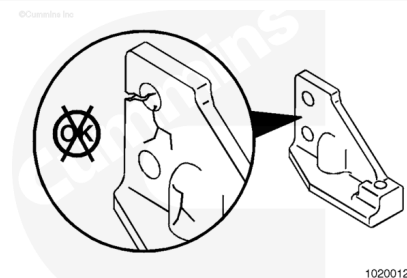

Install

Install the turbocharger control shutoff valve filter head mounting bracket.

Torque Value: 47 n•m [35 ft-lb]

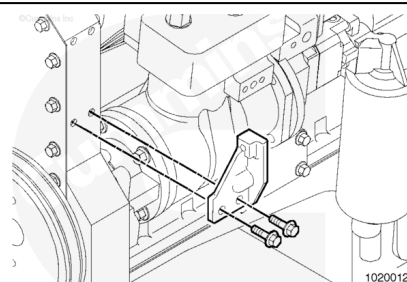

Finishing Steps

Install the turbocharger control shutoff valve filter head. Refer to Procedure 010-115 (</qs3/pubsys2/xml/en/procedures/35/35-010-115-tr.html>).

Start and run engine. Check for fault codes and air leaks.

