


Trainings ▾

Install

⚠ CAUTION ⚠

The turbocharger control valve is very sensitive to contamination. Failure to prevent contamination from entering the turbocharger control valve air lines will cause damage to the turbocharger control valve.

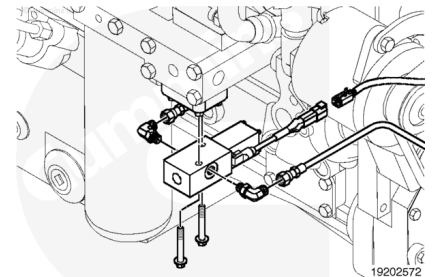

⚠ CAUTION ⚠

Do not use thread sealant. Use of thread sealant will cause damage to turbocharger control valve.


Remove masking tape from the ends of the turbocharger actuator supply line before installing the line.

Connect the air supply line to the turbocharger air control valve.

Torque Value: 16 n•m [142 in-lb]


Connect the air supply line to the turbocharger actuator.

Torque Value: 16 n•m [142 in-lb]

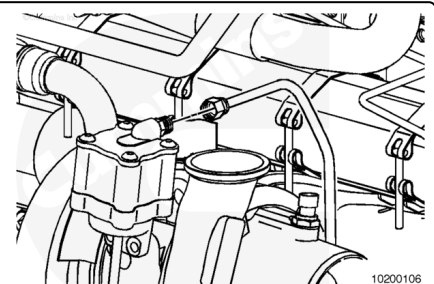

Connect the P-clip to the rear of the turbocharger bearing housing.


Torque Value: 20 n•m [177 in-lb]

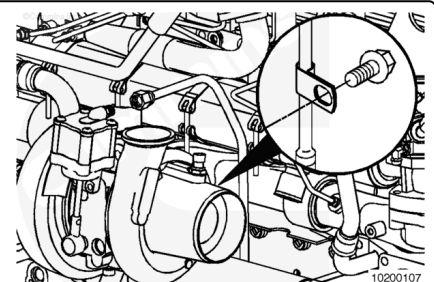

Start and run the engine.

Verify proper operation.

Check for air leaks.

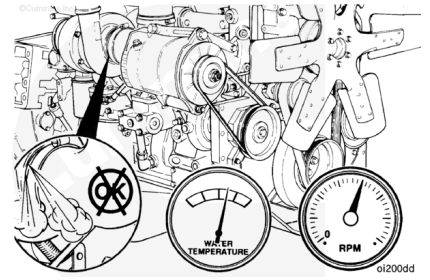

Last Modified: 13-Oct-2005
