


Trainings ▾

Remove

Note : Removal of the sensor plumbing does **not** require the sensor to be removed. Remove the sensor **only** if the sensor adapter is being replaced. To remove the sensor refer to Procedure 019-376 (</qs3/pubsys2/xml/en/procedures/70/70-019-376.html>) in the Troubleshooting and Repair Manual, CM870 Electronic Control System ISM Engines, Bulletin 4021381 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021381.html>).

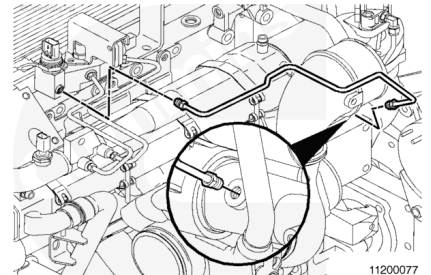

Remove the p-clip and the mounting capscrew.


Loosen the tube nuts at the exhaust manifold and at the sensor adapter.

Remove the tube.

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

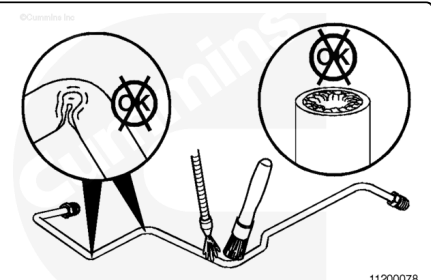

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Check the inside of the tube. If clogged, use compressed air to remove debris or soot buildup.

Clean the outside of the tube with safety solvent.

Dry with compressed air.

Check the tube for cracks and thread damage.


Replace the tube if cracks or damage are found.

Install

Remove the sensor adapter mounting screws so that the adapter can float to help the tube nut thread start properly.

Apply a film of high temperature anti-sieze compound to the threads of the nuts.

Position the exhaust gas pressure sensing tube as illustrated in the graphic.

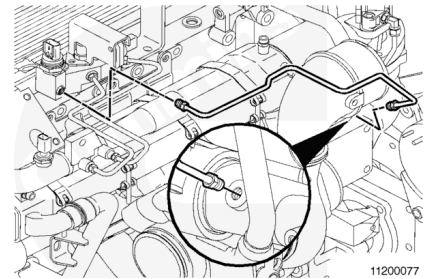

Pre-start the tube nuts into the respective threaded bosses.

Tighten the tube nuts.

Torque Value: 16 n•m [144 in-lb]

Attach the p-clip to the tube with the loop facing outward and down.

Pre-start the capscrew through the clip and the cooler bracket, into the air intake manifold.

Tighten the capscrew.

Torque Value: 47 n•m [35 ft-lb]

If malfunction resulted in coolant, oil, excessive fuel or excessive black smoke in the exhaust system, the aftertreatment system **must** be inspected. Refer to Procedure 014-013 (</qs3/pubsys2/xml/en/procedures/101/101-014-013-tr.html>).