


## Trainings ▾

### Remove Pad Mount

Remove the four alternator mounting capscrews.

Remove the alternator from the alternator bracket.

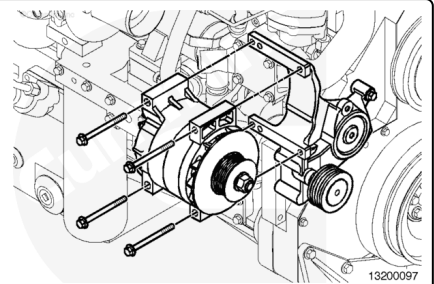

### Spool Mount

Remove the adjusting link mounting capscrew (3) and the adjusting link.

Remove the alternator mounting capscrew (1), nut, washer (2), and alternator.

