


Trainings ▾

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

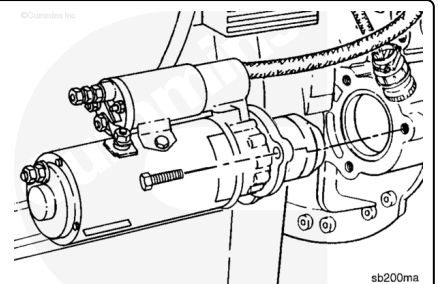

Before installing the starting motor, make sure the capscrews are the correct size and grade.

Install the starting motor and the three mounting capscrews.

Tighten the capscrews.

Torque Value: 90 n•m [66 ft-lb]

Install and tighten the electrical connections to the starting motor.

