


Trainings ▾


Remove

Use a hoist or lifting fixture to support the front of the engine.

Remove the capscrews from the front engine mount.

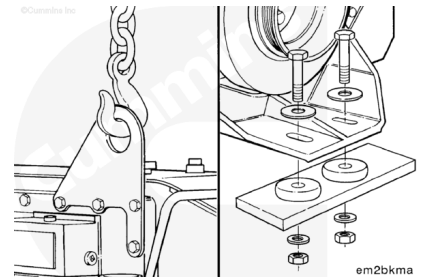


Remove the six mounting capscrews and the front engine support.

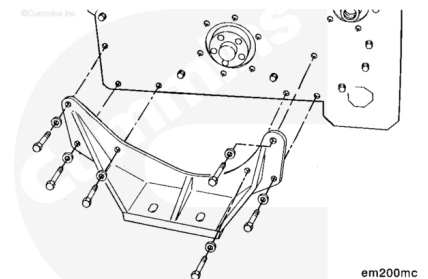

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

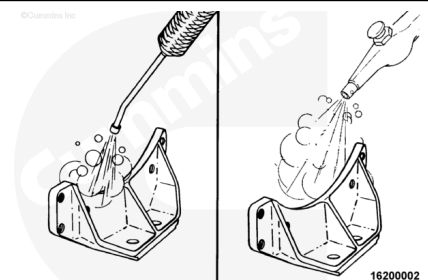

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use steam or solvent to clean the front engine support. Dry with compressed air.

Inspect the support for cracks or any other damage.

If the support is cracked or otherwise damaged, it **must** be replaced.

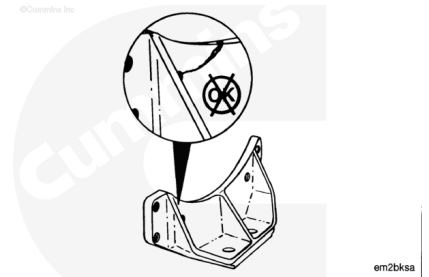


Install

Apply a coating of thread sealant, Part Number 3823494, to the three capscrews at locations 1, 2 and 3.

Install the front support and mounting capscrews.

Torque Value:

1. 68 n•m [50 ft-lb]
2. Plus 60 degrees (1 flat)

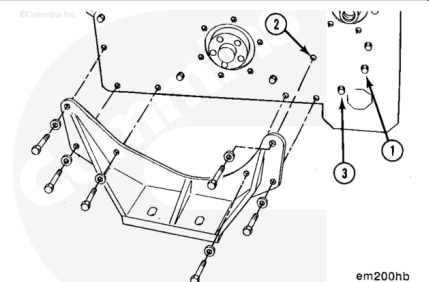

Lower the front of the engine.

Install the front engine mount capscrews.

Tighten the capscrews. Refer to the OEM service manual.

Remove the lifting fixture or hoist from the front of the engine.

