

Trainings ▾

Remove


Rear Gear Train

Before the camshaft can be removed, the tappets **must** be lifted off the camshaft lobes.


With the engine removed and on an engine stand, rotate the engine so that the oil pan side of the engine is up if the engine is **not** already in this position. This will allow the tappets to fall off the camshaft lobes prior to the camshaft being removed.

Note : Inspect the tappets to make sure they are no longer in contact with the camshaft lobes prior to removing the camshaft.

Note : The following illustrations will show the engine in the upright position for clarity.

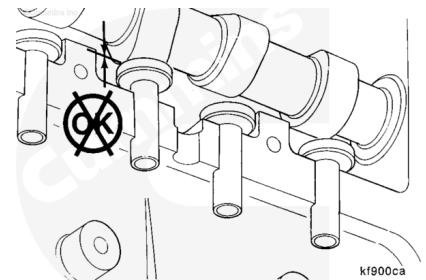


Remove the thrust plate capscrews and remove the thrust plate.

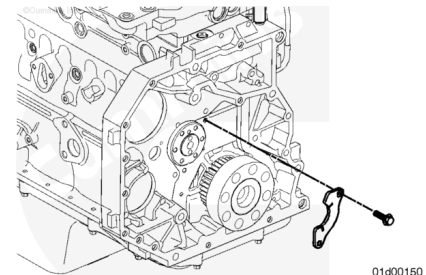

⚠ CAUTION ⚠

The camshaft will drop once the camshaft clears the last bushing if not supported. This can cause damage to the camshaft journal or, if equipped, the camshaft speed indicator ring.

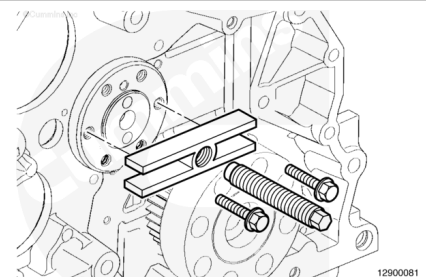

Use a gear puller, service tool part number ST647, or equivalent, to attach to the end of the camshaft where the camshaft gear mounts, to act as a handle. This will give proper leverage and make it easier to remove the camshaft.

Slide the camshaft out of the bore using the installed gear puller.


Front Gear Train

Before the camshaft can be removed the tappets **must** be lifted off the camshaft lobes.

With the engine removed and on an engine stand, rotate the engine so that the oil pan side of the engine is up if the engine is **not** already in this position. This will allow the tappets fall off the camshaft lobes prior to the camshaft being removed.


Note : Inspect the tappets to make sure they are no longer in contact with the camshaft lobes prior to removing the camshaft.

Note : The following illustrations will show the engine in the upright position for clarity.

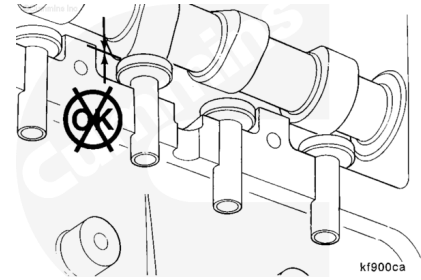

Remove the capscrews from the thrust plate.

Remove the thrust plate.

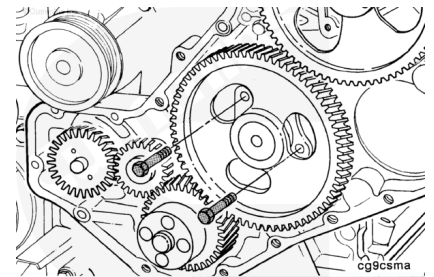

Remove the camshaft and camshaft gear as an assembly.

Note : Rotate the camshaft as it is being removed. Use extreme care to make sure that the bushings are not damaged during this process.

