


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

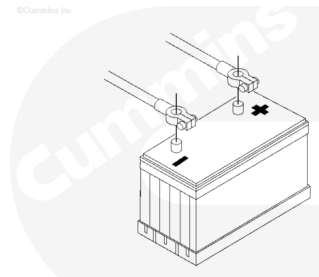

13900050

Disconnect the batteries.


Remove the drive belt. Refer to Procedure 008-002
(</qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html>).

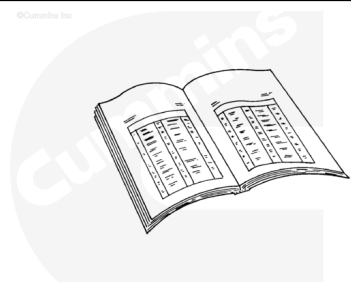

ck800wa

Remove

Remove the six capscrews that hold the crankshaft pulley to the nose of the crankshaft.

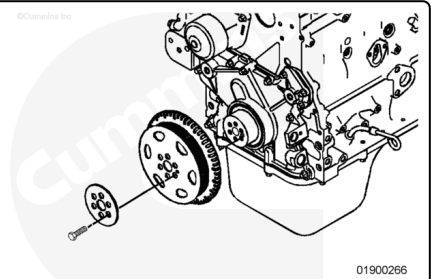


01900266

Clean and Inspect for Reuse

⚠ WARNING ⚠

Compressed air used for cleaning should not exceed 207 kPa [30 psi]. Wear protective clothing, goggles/shield, and gloves to reduce the possibility of personal injury.

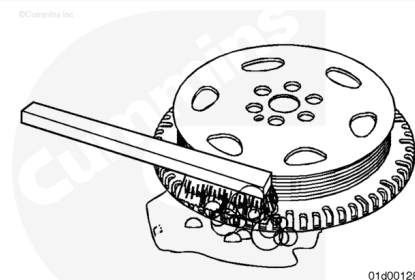


Using soapy water, clean any oil from the crankshaft pulley.

Dry the crankshaft pulley with compressed air.

Inspect the crankshaft pulley for cracks, or damaged surfaces.


If any damage is found, the crankshaft pulley **must** be replaced.

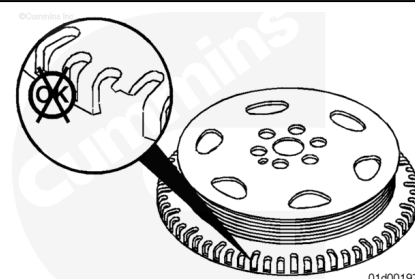

Install

Install the six capscrews that hold the crankshaft pulley to the nose of the crankshaft.


Tighten crankshaft pulley capscrews.

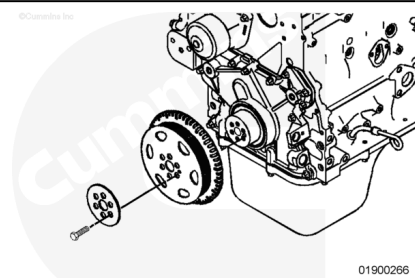

Torque Value:	Step 1	50 n.m [37 ft-lb]
	Step 2	Rotate 90 degrees


Finishing Steps

- Install the drive belt. Refer to Procedure 008-002 (/qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html).

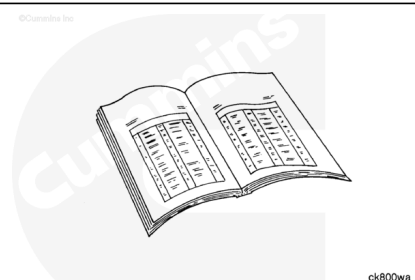

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

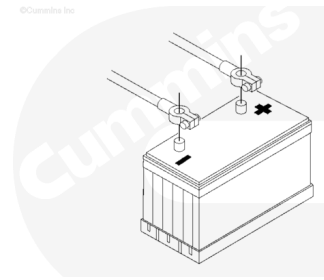

13900050

Connect the batteries.