



Trainings ▾

Preparatory Steps

Remove the drive belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html>).

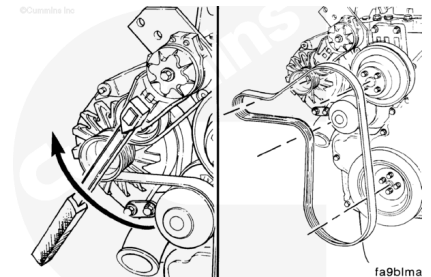


Remove the vibration damper. Refer to Procedure 001-052 (</qs3/pubsys2/xml/en/procedures/40/40-001-052-tr.html>).

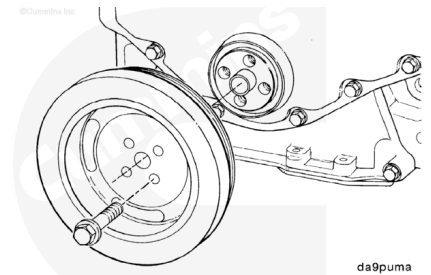


Remove

Remove the gear cover. Refer to Procedure 001-031 (</qs3/pubsys2/xml/en/procedures/40/40-001-031.html>).

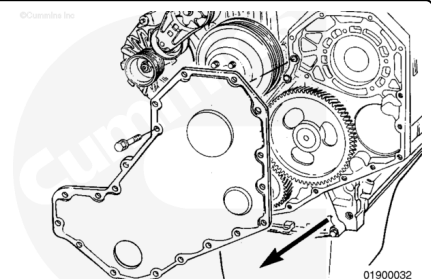

⚠ CAUTION ⚠

Do not nick or gouge the crankshaft with the chisel. If the crankshaft is damaged, it must be replaced.

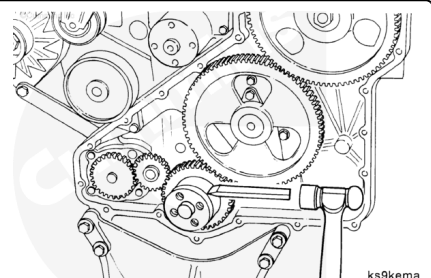


Note : Use a hammer and chisel that is **only** as wide as the wear sleeve.

Make one or two chisel marks across the wear sleeve. This will expand the wear sleeve, allowing the sleeve to be removed.

Clean

Use a crocus cloth to remove any rust or other deposits from the crankshaft flange.


Use a clean cloth to clean the crankshaft flange.

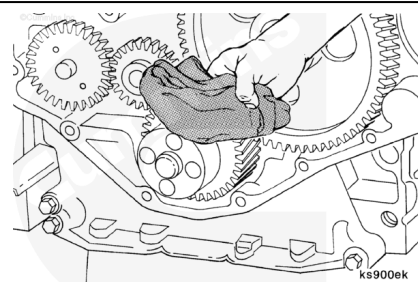

Inspect for Reuse

Inspect the seal contact area of the crankshaft for a wear groove. If the seal has worn a groove deep enough to be felt with a sharp object or fingernail, it will be necessary to install a wear sleeve to prevent an oil leak.

The oil seal used with the wear sleeve has a larger inside diameter than the standard seal. The two seals are **not** interchangeable. Refer to the appropriate B Series parts catalog for the correct part number.

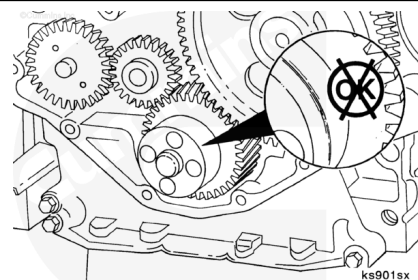


Install

Crankshaft Front Wear Sleeve Installation Tool, Part Number 3824500


Use the driver to install the wear sleeve to the correct position on the crankshaft. The kit consists of the following:

Ref. Number	Description	Qty.
1	Driver	1

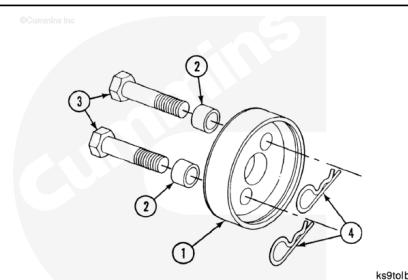


Ref. Number	Description	Qty.
2	Spacer	2
3	Capscrew M14 x 1.5 x 60 mm	2
4	Hairpin Cotter	2

Apply a thin coat of clean lubricating engine oil to the inside diameter and capscrew threads.

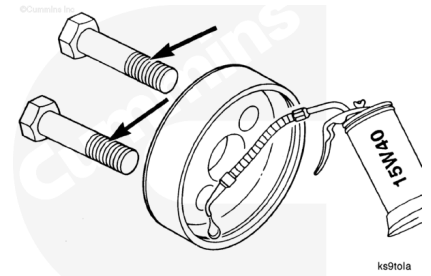


Apply a thin coat of clean lubricating engine oil to the crankshaft flange.

Position the chamfered end of the wear sleeve onto the end of the crankshaft.

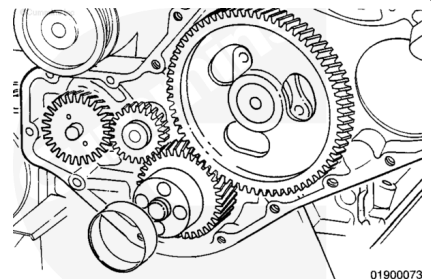


Position the counterbore end of the driver onto the wear sleeve.

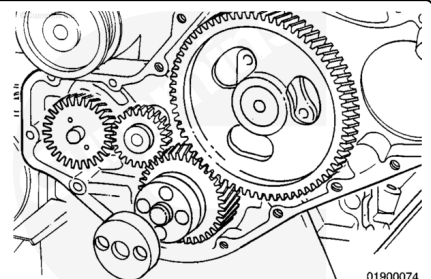

Install two capscrews (without spacers or hairpin cotters) through the driver and into the crankshaft capscrew holes.

Align the wear sleeve and driver perpendicular to the crankshaft.

Tighten the capscrews finger-tight.

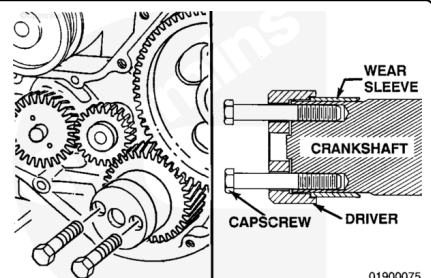


⚠ CAUTION ⚠

To prevent damage to the wear sleeve, do not exceed one-half revolution of each capscrew.

Alternately tighten the capscrews one-half turn until the sleeve is installed to a depth of approximately 16 mm [0.625 in].


Torque Value: 20 n•m [15 ft-lb]

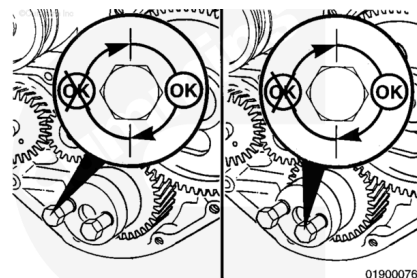


Remove the two capscrews.

Install the spacer on each capscrew.


Install the two capscrews.

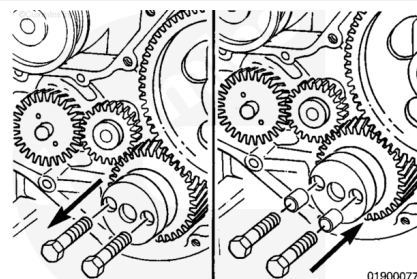

Continue to tighten the capscrews alternately until the bottom of the driver contacts the end of the crankshaft.

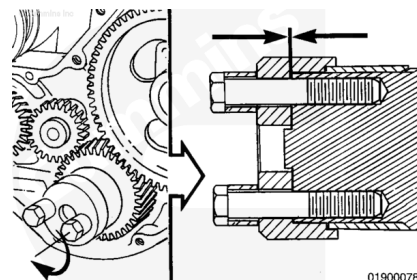

Remove the driver. Use the hairpin cotters to secure the capscrews and spacers to the tool during storage.

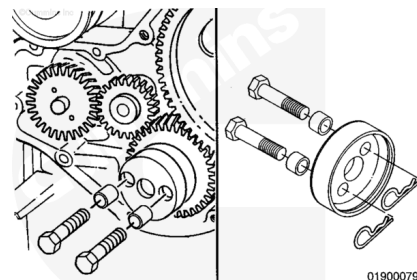

Install a new seal into the gear cover. Refer to Procedure 001-023 (</qs3/pubsys2/xml/en/procedures/40/40-001-023.html>).

Install the front gear cover. Refer to Procedure 001-031 (</qs3/pubsys2/xml/en/procedures/40/40-001-031.html>).

