


Trainings ▾

Remove

Rear Gear Train

⚠ CAUTION ⚠

Some rear gear train engines, with a cast aluminum front gear cover, have two threaded holes to aid in the removal of the front gear cover. When looking at the front of the front gear cover, there is a threaded through hole in the lower right-hand corner that can be used with a jackscrew. On the lower left-hand corner, there is a threaded blind hole. A capscrew can be inserted into that blind hole to be used with a slide hammer. Do NOT use the lower left-hand threaded blind hole as a jackscrew or the front gear cover will be damaged.

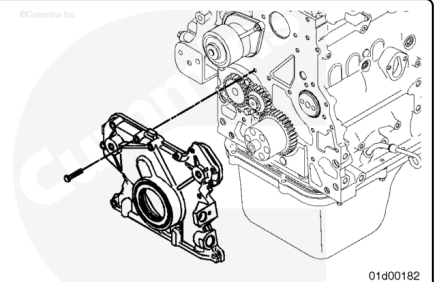

Remove the front gear cover mounting capscrews.

⚠ CAUTION ⚠


To break the seal, pry the front gear cover away from the front gear housing . Be careful NOT to damage the front gear cover when breaking the seal to the front gear housing.

Remove the front gear cover.

Front Gear Train

⚠ CAUTION ⚠

To break the seal, pry the front gear cover away from the front gear housing . Be careful NOT to damage the front gear cover when breaking the seal to the front gear housing.

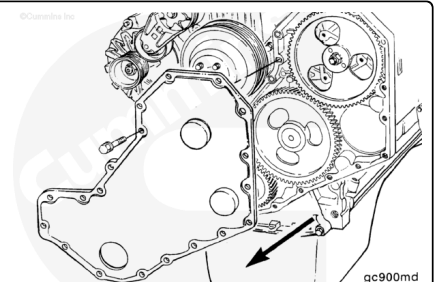

Remove the front gear cover mounting capscrews.

Remove the front gear cover with the front crankshaft seal.

Note : Some engines have an additional dust shield installed in front of the front crankshaft seal.

Last Modified: 03-Aug-2016
