


Trainings ▾

Install

Saddle Jet Piston Cooling Nozzle

⚠ CAUTION ⚠

**Do not use a hammer to install the piston cooling nozzles.
Use hand pressure only. Using a hammer can cause
component damage.**

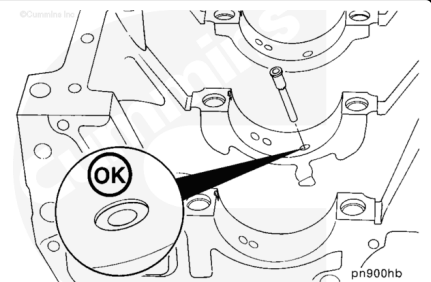

Push the piston cooling nozzle into place by hand.


Use a flat punch to push the nozzle into the recess.

J-Jet Piston Cooling Nozzle

Note : The crankshaft must be installed before the J-jet piston cooling nozzle can be installed.

⚠ CAUTION ⚠

**Slight bending of the piston cooling nozzles can result in
severe engine damage. Replace piston cooling nozzle if it is
bent or damaged during disassembly or assembly.**

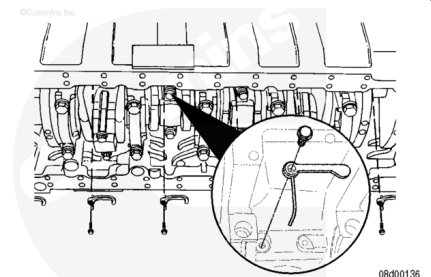

Install the piston cooling nozzle one cylinder at a time rotating the crankshaft as necessary for access.

Use a long extension to guide the capscrew and/or piston cooling nozzle into place.

Note : The locator pin on the J-jet piston cooling nozzle **must** engage the locating hole in the block for proper alignment.

Tighten the capscrew.

J-Jet Capscrew	15 n.m	[133 in-lb]
----------------	--------	-------------

