

Trainings ▾


Remove

Saddle Jet Piston Cooling Nozzle

Note : The crankshaft must be removed before the saddle jet piston cooling nozzles can be removed.

Remove the piston cooling nozzles by pressing from the top with an appropriate size punch.

Note : Do not reuse the saddle jet piston cooling nozzles once removed.

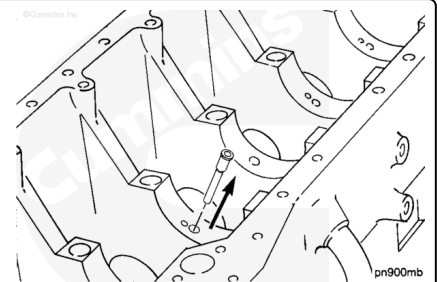

J-Jet Piston Cooling Nozzle

Rotate the crankshaft to various positions to access each piston cooling nozzle.

Remove the piston cooling nozzles.

