

Trainings ▾

General Information

The vibration damper controls the twisting or torsional vibration of the crankshaft. A vibration damper is engineered for use on a specific engine model.


It is **not** economical to repair a vibration damper in the field. Install a new or rebuilt vibration damper if the inspection indicates that a damper is damaged.

The viscous vibration damper has a limited service life. The damper **must** be replaced if worn or damaged.

There are two different design vibration dampers used on the B Series engines:

- Viscous damper (A) for engines rated at speeds above 2500 rpm.
- Rubber element damper (B) for engines rated at speeds below 2500 rpm.


Note : The rubber vibration damper (B) is available either with or without the crankshaft adapter.

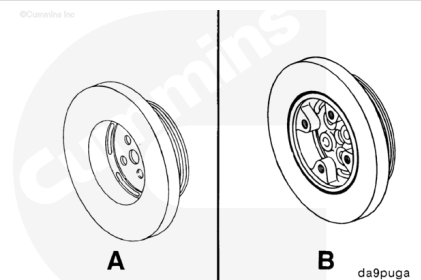

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

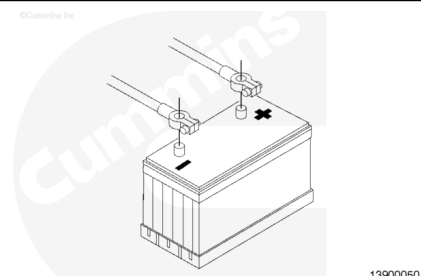

- Disconnect the batteries. See equipment manufacturer service information.

- Remove the drive belt. Refer to Procedure 008-002 in Section 8 (/qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html).

©Cummins Inc.

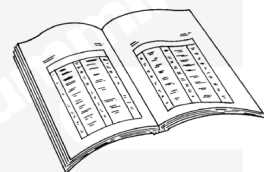

ck800wa


Remove

For front gear train engines, remove the four capscrews.

For rear gear train engines, remove the six capscrews.

Remove the vibration damper.

©Cummins Inc.

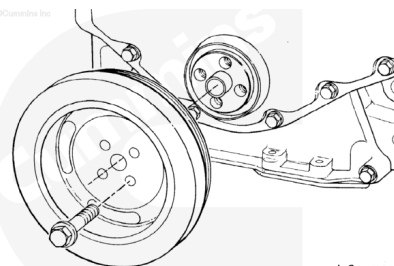

da9puma

Clean and Inspect for Reuse


⚠ WARNING ⚠

Compressed air used for cleaning should not exceed 207 kPa [30 psi]. Wear protective clothing, goggles/shield, and gloves to reduce the possibility of personal injury.

Using soapy water, clean any oil from the vibration damper.

Dry the vibration damper with compressed air.

©Cummins Inc.

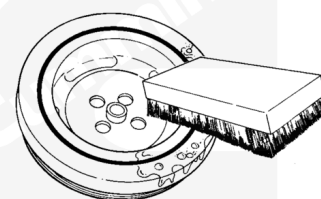


da900ed

Check the mounting web for cracks.

Check the housing for dents or raised surfaces.

Replace the damper if damage is found.

©Cummins Inc.

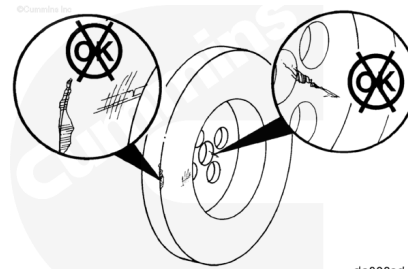


da900sd

Note : The viscous damper is filled with a silicone fluid. After many hours of use, the silicone fluid can become thicker and expand.


To determine if the damper thickness is correct, remove the paint from the damper in four locations on either side of the damper.

Measure and record the thickness of the damper in four places. Measure the thickness at 80.65 mm [3.175 in] from the outside of the damper.

Replace the damper if its thickness varies by more than 6.35 mm [0.25 in].

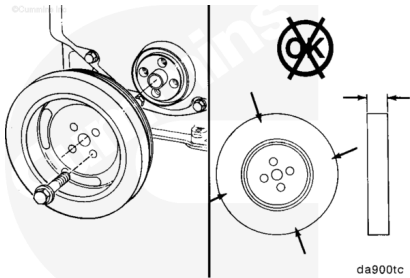


Spray the damper with spot check developer, type SKD-S2, or equivalent.

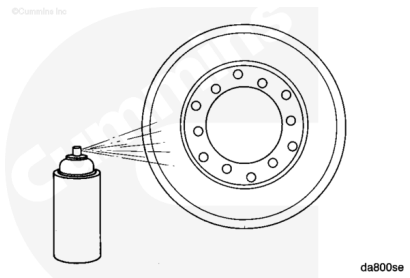

Measure


Measure the vibration dampers eccentricity.

Install a dial indicator as illustrated.

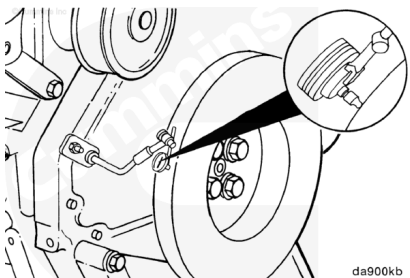

Rotate the crankshaft with engine barring tool, Part Number 3377371.

Record the dial indicators movement.

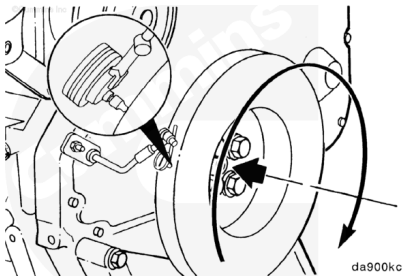


Vibration Damper Eccentricity per 25.4 mm [1.0 in] of Diameter


mm		in
0.10	MAX	0.004

Note : If the eccentricity is **not** within specification the vibration damper must be replaced.

Measure the vibration damper wobble.
Install a dial indicator as illustrated.
Push the crankshaft to the front or rear and zero the dial indicator.

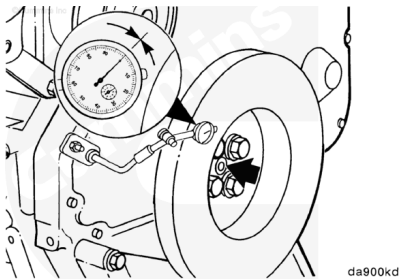

Rotate the crankshaft with engine barring tool, Part Number 3377371, 360 degrees, maintaining the position of the crankshaft.
Record the dial indicator movement.

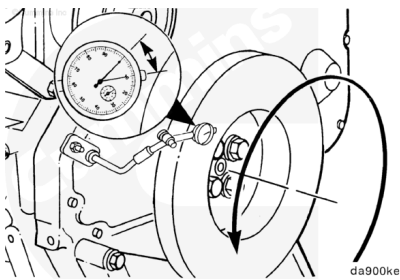

Vibration Damper Wobble per 25.4 mm [1.0 in] of Radius

mm		in
0.18	MAX	0.007

Install


Front Gear Train

Note : The B Series engines have two configurations for the crankshaft pulleys and vibration dampers. Determine which configuration is used and use the appropriate steps in this procedure.

One Piece Pulley/Vibration Damper

Install the crankshaft vibration damper.
Install and tighten the crankshaft pulley/vibration damper capscrews.

Torque Value: 125 n·m [92 ft-lb]

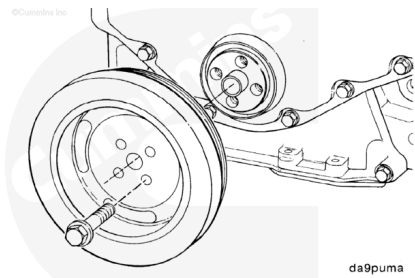

Two-Piece Pulley/Vibration Damper

Install the vibration damper.


Install and tighten the vibration damper capscrews.

Torque Value: 200 n·m [148 ft-lb]

Install the crankshaft pulley.

Install and tighten the crankshaft pulley capscrews.

Torque Value: 77 n·m [57 ft-lb]

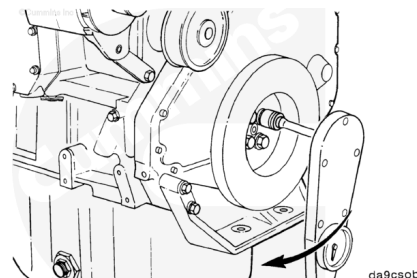

Rear Gear Train

Lubricate bolts with clean engine oil.


Install the vibration damper.

For rear gear train engines, tighten the six vibration damper capscrews in a criss-cross pattern.

Torque Value:


1. 50 n·m [37 ft-lb]

2. Rotate 90 degrees

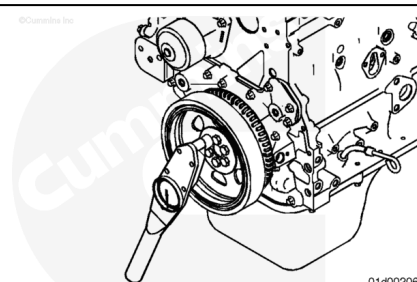


Finishing Steps

- Install the drive belt. Refer to Procedure 008-002 in Section 8 (</qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html>).

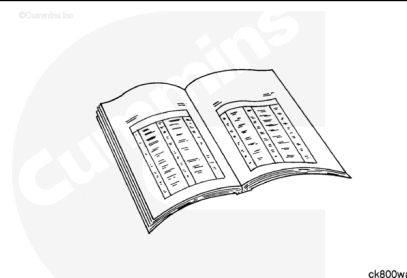

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

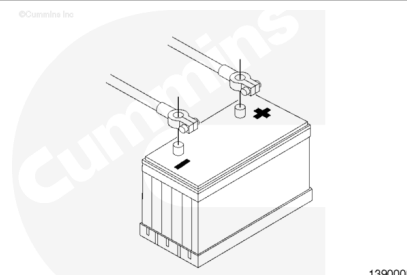

- Connect the batteries. See equipment manufacturer service information.

Last Modified: 26-Apr-2017
