

Trainings ▾

General Information


Front Gear Train

The engine data plate is typically located on the front gear housing next to the fuel injection pump.

Two types of data plates are typically used:

1. Metal stamped data plate which is riveted in place
2. A printed plastic data plate label adhered in place.

If the data plate is damaged, missing or incorrect, contact your local Cummins Inc. Service location to obtain a new data plate.

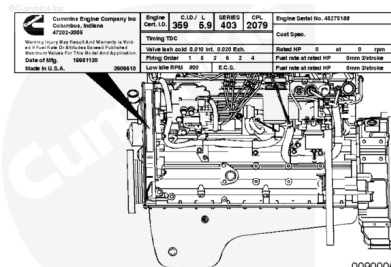


Rear Gear Train

The engine data plate is typically located on the rocker lever cover, but may be located on the gear housing.

Two types of data plates are typically used:

1. Metal stamped data plate which is riveted in place
2. A printed plastic data plate label adhered in place.

If the data plate is damaged, missing or incorrect, contact your local Cummins Inc. Service location to obtain a new data plate.

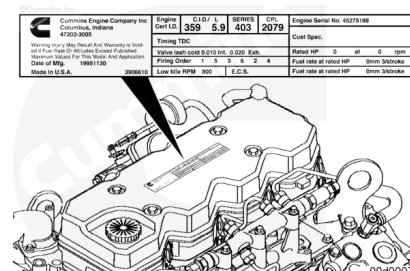


Remove

For metal stamped dataplates, remove the rivets securing the engine data plate.


Note : If the data plate is to be reused, care must be taken not damage the data on the plate.

Using a flat chisel and hammer, drive the chisel under the head of the rivet to pry the rivet out.

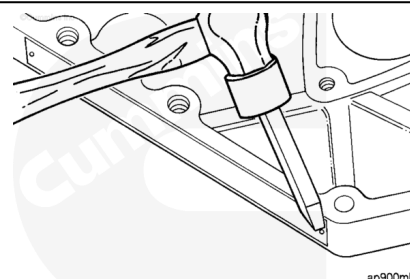

For printed plastic dataplates, using the sharp edge of a gasket scraper, peel up a corner of the data plate. Then pull on the corner to remove the data plate.


Note : In most instances the data plate will be damaged during removal, contact your local Cummins Inc. Service location to obtain a new data plate.

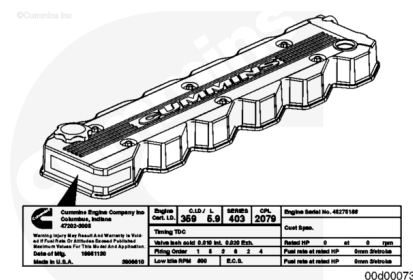

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

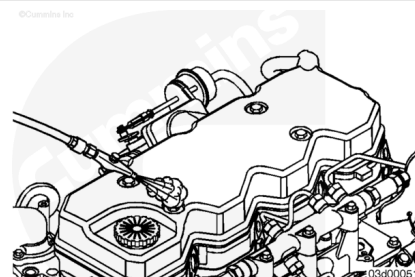

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Using solvent, clean the area where the data plate will be mounted.


Remove any left over adhesive from the printed plastic data plate. Use solvent with an abrasive pad, Part Number 3823258 or equivalent.

Dry with compressed air.

Install

⚠ CAUTION ⚠

When drilling holes for the data plate location, do not completely drill through the mounting location. Only drill deep enough to install the new blind rivets. Drill through will result in an oil leak.

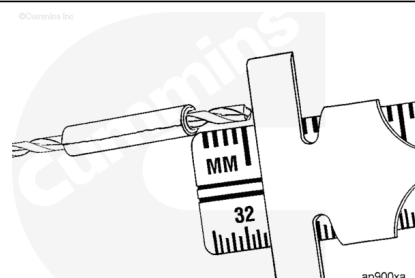

Note : The data plate should be located in the same area as it was previously installed.



ap900hc

[illegible]

Note : The data plate should be located in the same area as it was previously installed.