


Trainings ▾

General Information

Note : This procedure is for front gear train engines only.


For front gear train engines, a rear crankshaft seal carrier is mounted to the rear of the cylinder block to house the rear crankshaft seal. For rear gear train engines, the rear crankshaft seal is installed in the flywheel housing.

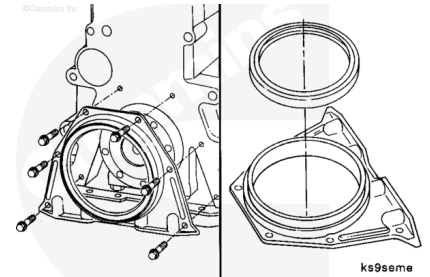


Install

Note : For engines equipped with a wet flywheel housing, make sure to replace the rear crankshaft seal with the correct rear seal. Rear crankshaft seals for a wet and dry flywheel housings may not be the same.

The new rear crankshaft seal (A) will come installed on a seal pilot (B). The seal **must** be left on the seal pilot while installing the seal onto the nose of the crankshaft. This will keep the lips of the seal from being damaged during installation.

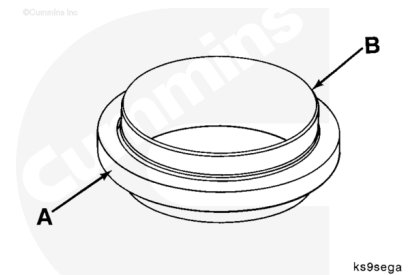


Install the rear crankshaft seal carrier and gasket. Apply Loctite™ 262 or 271 to the mounting capscrews and loosely tighten the rear seal carrier to the block.

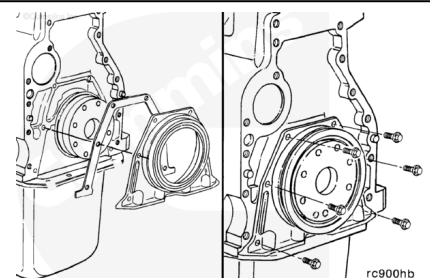


Note : It may be necessary to trim the rear seal carrier gasket so that it is even with the oil pan mounting surface.

Apply a thin bead of sealant, part number 3164067, at this joint prior to installing the rear seal carrier. The rear seal carrier **must** be installed within 10 minutes of applying the sealant.

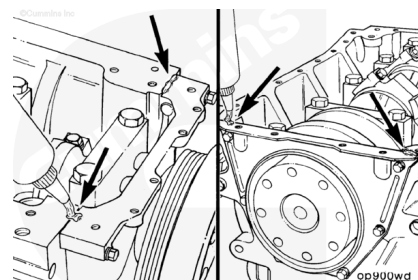


To aid in installation, the lubricating oil seal requires the application of a mild soap on the outside diameter of the seal case.

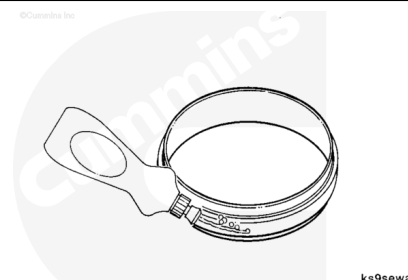

Place the new rear crankshaft seal, with the seal pilot, over the crankshaft nose and slide it by hand toward the flywheel housing.

Remove the seal pilot.

Use the disposable seal driver for front gear train engines to drive the rear crankshaft seal into the rear crankshaft seal carrier.

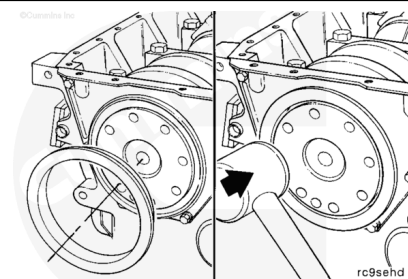

Note : Service tool, Part Number 3824078, used to install the rear crankshaft seal/wear sleeve assembly, can also be used to install the rear crankshaft seal.


Use a plastic hammer to drive the seal into the housing until the alignment tool stops against the housing.

Hit the tool at the 12, 3, 6 and 9 o'clock positions to drive the seal evenly and to prevent bending the seal carrier. Hit the seal driver until contact is made with the rear crankshaft seal carrier.


⚠ CAUTION ⚠

Do not push or force the cover in any direction. This may cause an irregular seal lip position after seal installation. An engine oil leak will result.

Align the rear cover even with both sides of the oil pan rail on the cylinder block.

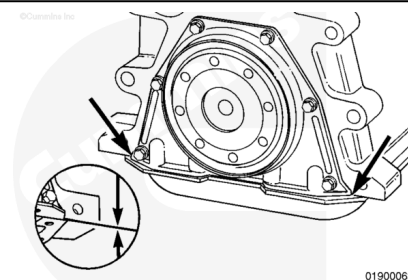

Tighten the rear cover capscrews. The chart below shows the proper torque value when using either a 9.8 or 10.9 grade capscrew. The grade is embossed on the top of the capscrew.

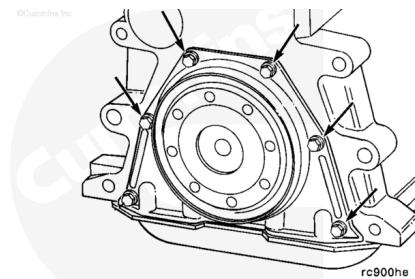

Rear Seal Carrier

Bolt Number	Bolt Size	Bolt Class	Torque	Dri-Loc™
3913638	M-6	9.8	10 N•m [89 in-lb]	Yes
3991306	M-6	10.9	13 N•m [115 in-lb]	Yes

Last Modified: 02-Mar-2012
