

Trainings ▾


Assemble

B4.5 RGT Engines

Note : If the gasket has been removed from the rocker lever cover, a new gasket must be used.

If replacing the rocker lever gasket, the following installation procedure must be used when installing the press-in gasket.

1. Press the molded gasket into the corners of the rocker lever cover
2. Press the remaining gasket into the rocker lever cover.

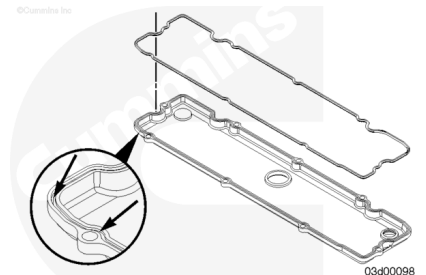

Install

B4.5 RGT Engines

Install the rocker lever cover over the mounting capscrews.

Install the isolators and mounting nuts.

Tighten the mounting nuts.

Torque Value: 24 n•m [18 ft-lb]



B3.9, B5.9, and B4.5 Engines

Install rocker lever cover(s).

Tighten the capscrews.

Torque Value: 24 mm [18 ft-lb]

