


Trainings ▾

Remove

B4.5 RGT Engines

Remove the mounting nuts and isolators from the rocker lever cover.

Remove the rocker lever cover.

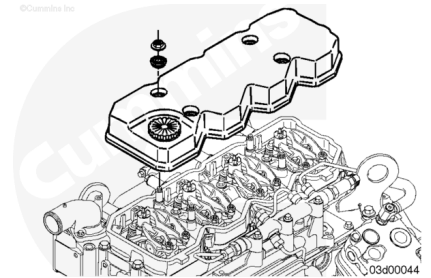

B3.9, B5.9, and B4.5 Engines

Remove the capscrews, capscrew seals, rocker lever covers and rocker lever cover gaskets.

