


Trainings ▾

Install

Front Gear Train

Connect the crankcase breather tube to the tappet cover on the side of the cylinder block.


Install the crankcase breather tube clamp.

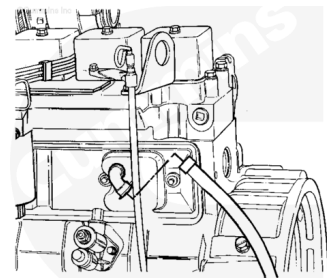

03900081


Rear Gear Train

Prior to installing the breather tube, apply engine oil to the o-rings located on the breather tube.

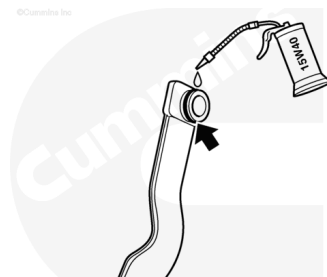

03d00159

Install the breather tube into the rear gear housing.

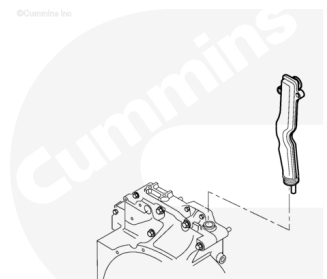


03900113

Connect the breather tube connection to the rocker lever cover.

Two capscrews directly mount the breather tube to the rocker lever cover. Install the capscrews to connect the breather tube connection to the rocker lever cover.

Tighten the capscrews.

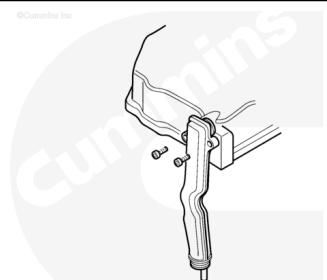

03900112

Torque Value: 10 n•m [89 in-lb]

Note : Some breather tube connections use internal Torx capscrews to secure the breather tube to the rocker lever cover.

Last Modified: 04-Nov-2015
