

Trainings ▾


Remove

Front Gear Train

Note : Some engines have the crankcase breather located in the front gear cover. The procedure is the same.

Remove the crankcase breather tube clamp.

Remove the crankcase breather tube from the tappet cover located on side of the engine block.

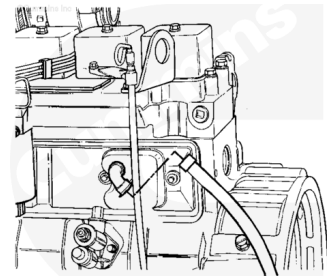


03900081

Rear Gear Train

Disconnect the breather tube at the back of the rocker lever cover.

Two capscrews directly mount the breather tube to the rocker lever cover. Remove the capscrews to disconnect the breather tube from the rocker lever cover.


Note : Some breather tubes use internal Torx capscrews to secure the breather tube to the rocker lever cover.

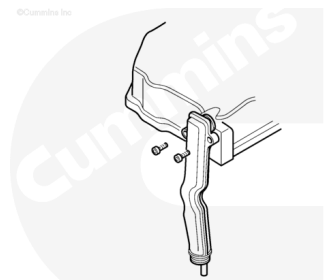

03900112

Remove the breather tube from the rear gear housing.

Note : There is an o-ring sealed connection to the rear gear housing. Remove the breather tube by pulling straight up.

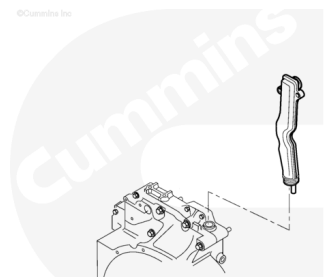

03900113

