


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

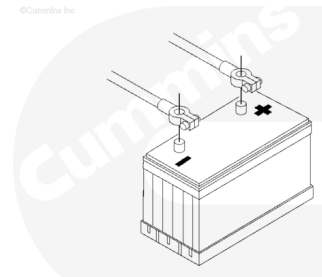

13900050

Remove


Front Gear Train

For front gear train engines, the closed crankcase ventilation valve is located between the tappet cover breather and intake manifold/cover of the engine.

The tappet cover closed crankcase ventilation valve is held in place by the molded closed crankcase ventilation hoses.

Note : Disconnecting and removing the hoses will also remove the valve.

Disconnect and remove the molded closed crankcase ventilation hoses and crankcase ventilation valve.

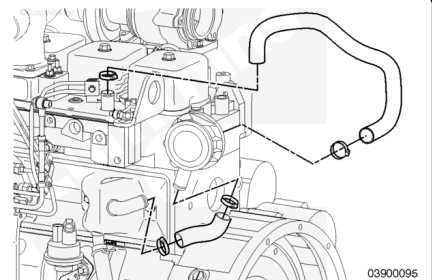


03900095

Rear Gear Train

For rear gear train engines, the closed crankcase ventilation valve is connected between the flywheel housing and intake manifold/cover of the engine.

The tappet cover closed crankcase ventilation valve is held in place by the molded closed crankcase ventilation hoses.

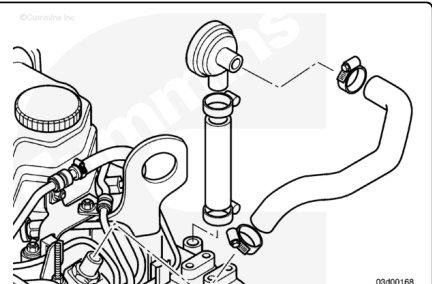

03800168


Note : Disconnecting and removing the hoses will also remove the valve.

Disconnect and remove the molded closed crankcase ventilation hoses and crankcase ventilation valve.

Clean and Inspect for Reuse

Inspect the hoses for cracks, cuts, or collapsing.

Inspect for debris or obstructions.

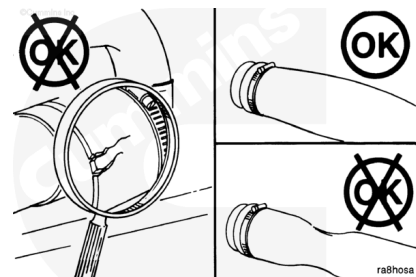


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

If the hoses are blocked they **must** be cleaned with a strong solution of detergent or replace to prevent excessive crankcase pressure buildup.

Dry components with compressed air.

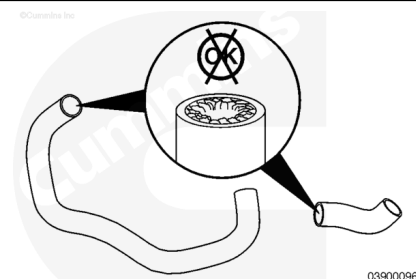


Install

Front Gear Train

Install the closed crankcase ventilation hoses and valve.

Tighten the hose clamps.

Torque Value: 8 n•m [71 in-lb]

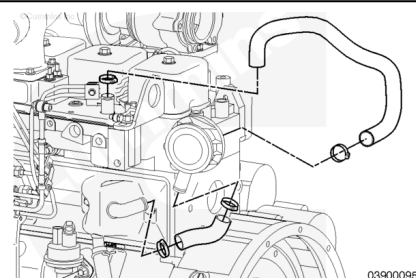


Rear Gear Train

Install the closed crankcase ventilation hoses and valve.

Secure the hose clamps.


Torque Value: 8 n•m [71 in-lb]

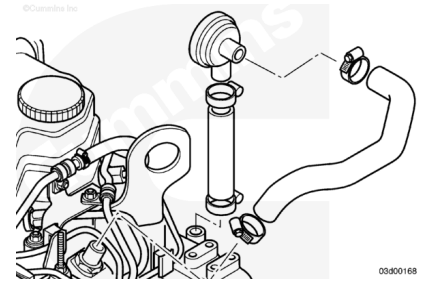

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

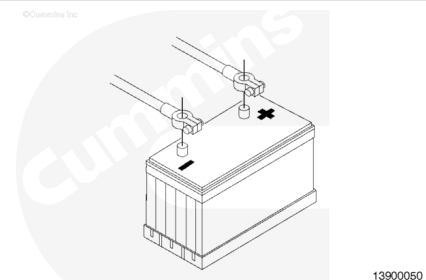

- Connect the batteries.