


Trainings ▾

Remove


Disconnect the external oil feed line at the inboard side of the fuel injection pump (if applicable) and the main oil rifle.

Disconnect the external oil feed line at the rear of the pump or AFC latchout if applicable.

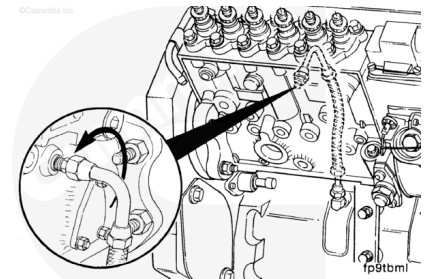


Locate top dead center for cylinder Number 1. Push the top dead center pin into the hole in the camshaft gear while slowly barring the engine.

Note : Be certain to disengage the timing pin after locating top dead center.

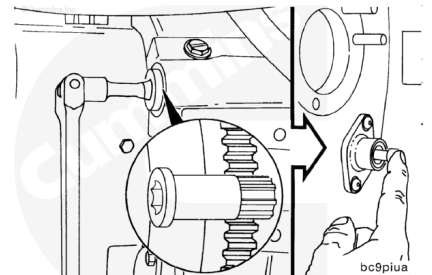


Remove the fuel injection pump mounting bracket, if applicable.

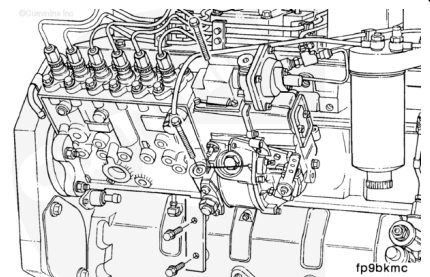

Remove the nut and washer from the fuel injection pump shaft.

Note : If necessary, insert two capscrews 180 degrees apart in the damper mounting locations in the nose of the crankshaft. Use an appropriate pry bar between the two capscrews to prevent the engine from turning when loosening the fuel pump gear mounting nut.

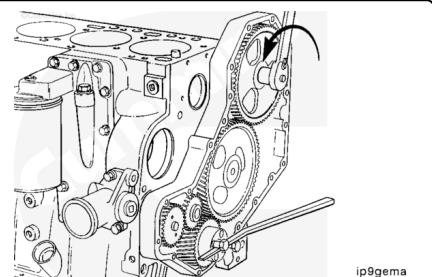

Use fuel pump gear puller, Part Number 3163381 or Part Number 3824469 with M8-1.25 x 50 capscrews, grade 8.8 or equivalent.

Pull the fuel injection pump drive gear loose from the shaft.

Remove the fuel injection pump drive gear.

