

Trainings ▾


Remove

Front Gear Train

Bosch® and Stanadyne Rotary Pumps

10 mm


Remove the capscrew that is connected to the pump and the tail support bracket (2) first; then remove the capscrews from the bracket (1) and block.

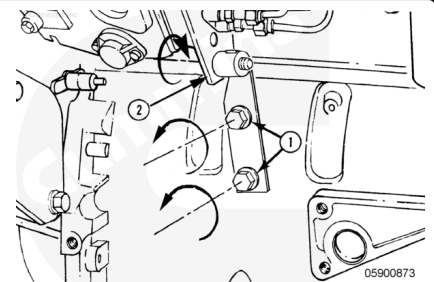

In-line Fuel Injection Pumps

10 mm

Remove the capscrew that is connected to the pump and the tail support bracket (2) first; then remove the capscrews from the bracket (1) and block.

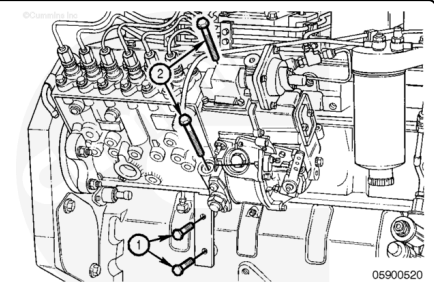


Four-Cylinder

Remove the capscrews (1) which mount support bracket assembly to fuel pump.

Remove the capscrews (2) which mount the support bracket assembly to the engine block.

Note : Not all four cylinder engines are equipped with this style of bracket. If the engine is equipped with a two piece bracket, remove the bolts as depicted.

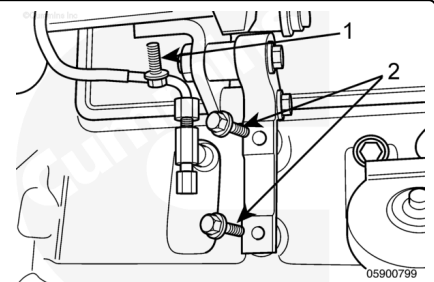

Rear Gear Train

10 mm

Remove the capscrew that is connected to the pump and the tail support bracket (2) first; then remove the capscrews from the bracket (1) and block.

