


Trainings ▾

Install

⚠ CAUTION ⚠

Alternately tighten the mounting capscrews. As the capscrews are tightened, the fuel lift pump plunger is pushed into the pump. Failure to tighten the capscrews in an even manner can result in the plunger being bent or broken, causing sticking and failure.

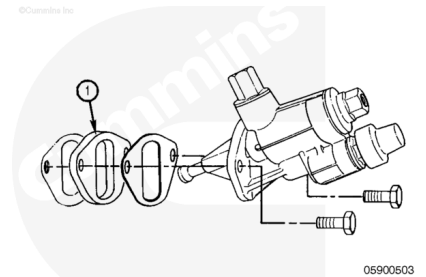

Diaphragm Style and Piston Style

Install the pump.

Torque Value: 24 n•m [212 in-lb]

The 5 mm [0.20-in] spacer (1), Part Number 3914284, must be installed along with a new gasket, Part Number 3931348, on each side of the spacer.

Note : For some applications, a bracket used for supporting other options will replace the 5 mm [0.20-in] spacer.