


Trainings ▾

Preparatory Steps

Disconnect the high-pressure line. Refer to Procedure 006-051 (</qs3/pubsys2/xml/en/procedures/40/40-006-051-tr.html>).


Note : Because the valves are installed 90 degrees to the pump axis, the pump will possibly need to be removed to change the valves close to the cylinder block.

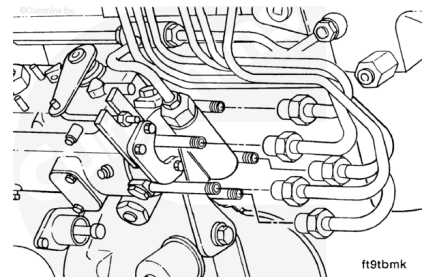

Remove

CAV


Remove the valve.

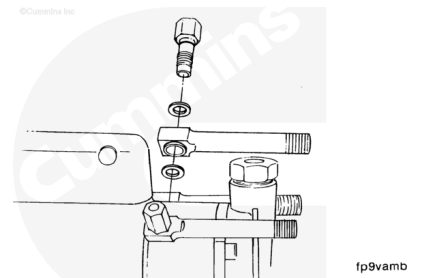


Inspect for Reuse

Stanadyne

Inspect the valve to be sure it is **not** stuck.

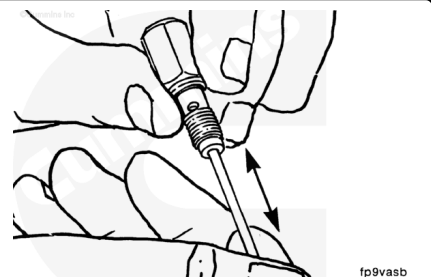

Inspect the sealing surfaces for possible leak paths.

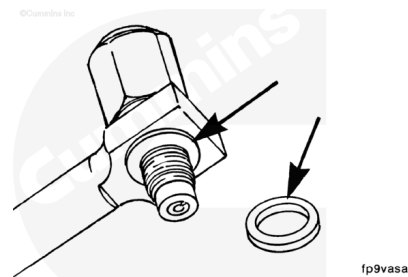


Install

CAV

⚠ CAUTION ⚠

The installation torque is very critical. Overtightening can distort the bore in the pump hydraulic head, causing the rotor to seize in the bore. Never tighten the valve with the engine running.

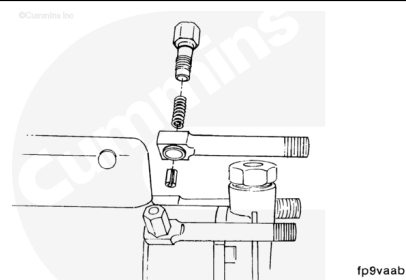


Assemble the back leakage valve and new washers.

Tighten the valve.

Torque Value: 30 N·m [22 ft-lb]

Connect the high-pressure line. Refer to Procedure 006-051 (</qs3/pubsys2/xml/en/procedures/40/40-006-051-tr.html>).

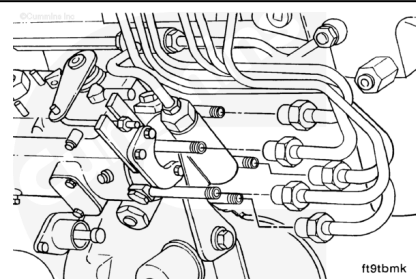

Start the engine, and vent one line at a time until the engine runs smoothly.

