


Trainings ▾

Install

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

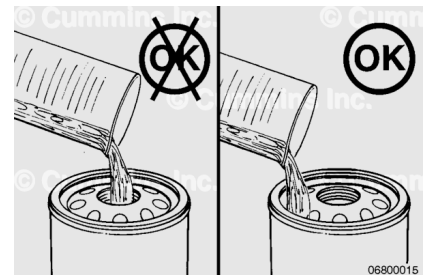


⚠ CAUTION ⚠

When pre-filling the filter do not pour fuel down the center (clean side) of the filter. Pour clean fuel into the outer openings (dirty side) of the filter. Use a clean side block off plug, if available, to prevent fuel from entering the clean side of the filter. Pre-filling on the clean side of the filter can result in debris entering the fuel system and damaging fuel system components.

Fill the new filter(s) with clean diesel fuel.


Lubricate the seal with clean lubricating engine oil.

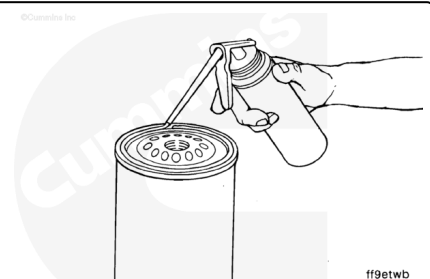

⚠ CAUTION ⚠

Mechanical overtightening can distort the threads as well as damage the filter element seal or filter can.

Install the fuel filter on the fuel filter head. Turn the filter until the gasket contacts the filter head surface.

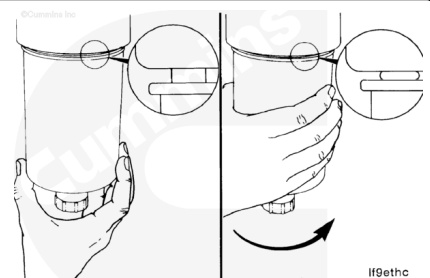

Tighten the fuel filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after the gasket contacts the fuel filter head surface, or as specified by the fuel filter manufacturer.

Last Modified: 16-Jan-2009
