


Trainings ▾

Preparatory Steps


Clean debris from around the filter head area.

Remove the fuel filters.

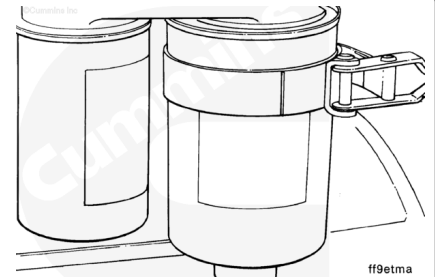

Remove


Remove the retaining nut, fuel filter head adapter, and sealing washers.

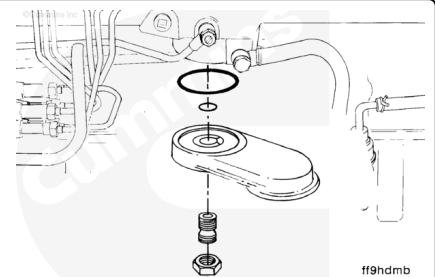

Install


Install the sealing washers, fuel filter head adapter, and the retaining nut.

Torque Value: 32 n•m [24 ft-lb]

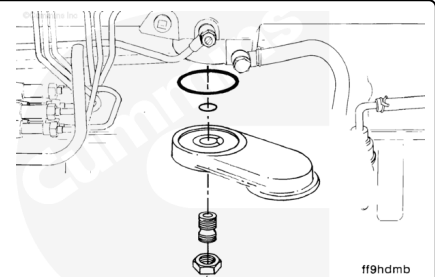

Finishing Steps

Install the fuel filters as specified by the filter manufacturer.

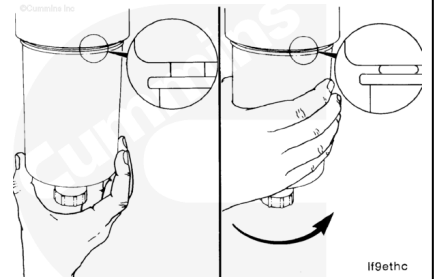

Last Modified: 09-Mar-2006
