


Trainings ▾

Remove

Clean all debris from around the fuel drain manifold connections.

Remove the banjo capscrews from the injectors and fuel filter head.

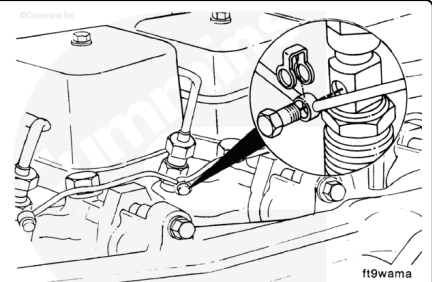

Install

Install the fuel drain manifold in the reverse order of removal.

Filter Head Banjo	15 n.m	[133 in-lb]
Injector Banjo	9 n.m	[80 in-lb]

