


Trainings ▾

Install

Distributor-Type Pump

Assemble the fuel drain line and fuel drain manifold in the reverse order of disassembly.


Note : Use new seals for the fittings.

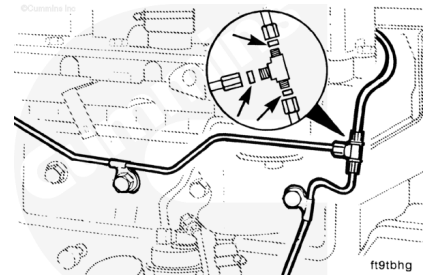

The installation torque for the banjo fitting screw is as follows:


Torque Value: 9 n•m [80 in-lb]

Note : Use new sealing washers for the fuel drain manifold.

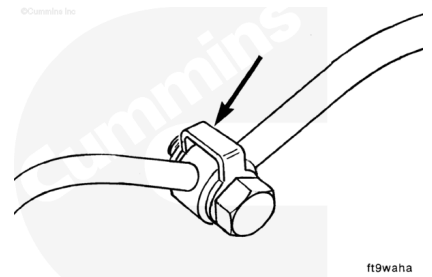

Install the clamp capscrews.

Torque Value: 24 n•m [18 ft-lb]

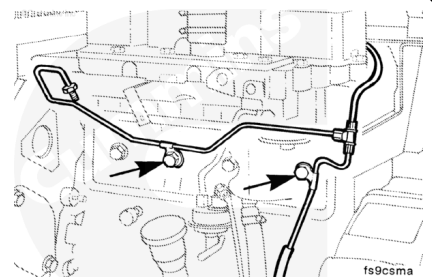

Bosch® In-Line pump

Install the fuel drain manifold in the reverse order of removal.

Injector Banjo	9 n.m	[80 in-lb]
Fuel Filter Head	13 n.m	[115 in-lb]

Note : The fuel line support bracket capscrew in the intake manifold requires liquid Teflon™ sealant.

