


Trainings ▾

Install

Low Pressure Fuel Line(s)

Note : When replacing the fuel lines, replace the banjo fitting sealing washers (1) each time they are removed.

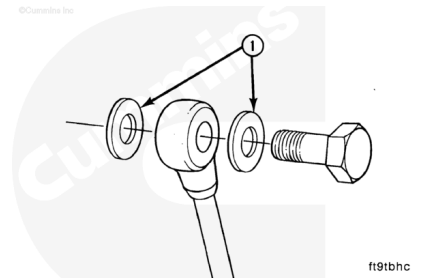


Fuel Pump Supply Line - Bosch® In-Line Pump.

Install the banjo capscrew and copper sealing washer at the fuel injection pump inlet.

Note : When replacing the fuel lines, replace the banjo fitting sealing washers each time they are removed.


Install the fuel line and tighten.

Torque Value: 32 n•m [24 ft-lb]

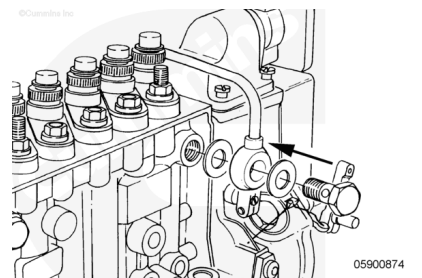


Install the banjo capscrew and sealing washers at the filter head.

Torque Value: 24 n•m [18 ft-lb]

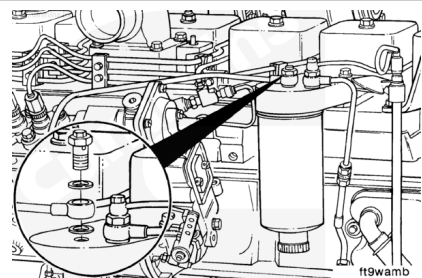

Install the fuel supply line to the two Lucas CAV fuel injection pumps.


Torque Value: 24 n•m [18 ft-lb]

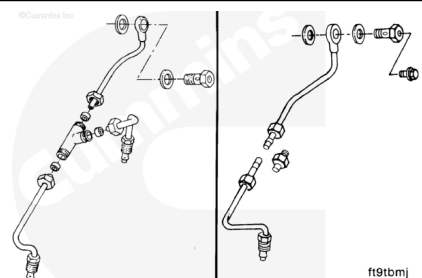

Install the fuel line to the Bosch® fuel injection pump fitting.

Note : To prevent overtightening the fuel injection pump inlet fitting, use two wrenches when installing the fuel supply line.


Torque Value: 32 n•m [24 ft-lb]

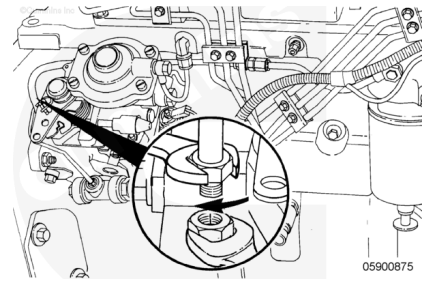

Fuel Injection Pump Supply Line - Distributor-Type Pumps.


Install the bleed screw banjo fitting.

Torque Value: 24 n•m [18 ft-lb]

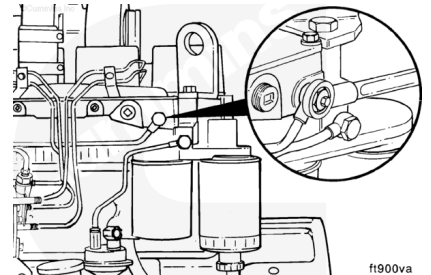


Install the fuel line to the filter head.

Torque Value: 24 n•m [18 ft-lb]

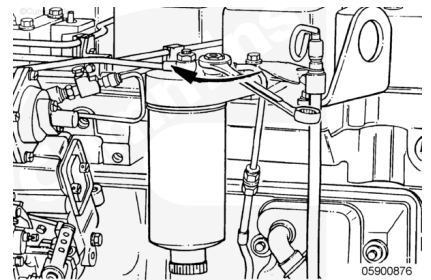

Install the fuel drain manifold line at the filter head.

Torque Value: 13 n•m [10 ft-lb]

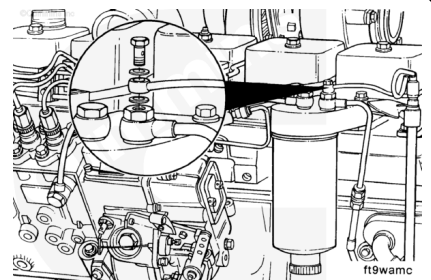


Bosch® In-Line Fuel Injection Pump Fuel Line.

Install the fuel line to the piston-style fuel transfer pump.

Torque Value: 24 n•m [18 ft-lb]


Note : To prevent overtightening the fuel injection pump inlet fitting, use two wrenches when installing the fuel supply line.

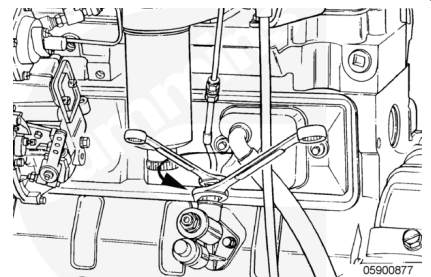

Low-Pressure Fuel Line Replacment - Distributor-Type Pumps.

Install the line from the fuel transfer pump and fuel filter head.

Torque Value: 24 n•m [18 ft-lb]

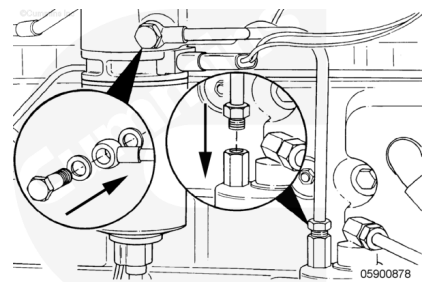

Last Modified: 31-Mar-2006
