


Trainings ▾

Remove

Low Pressure Fuel Line(s)


Low-Pressure Fuel Line Replacement - Distributor-Type Pumps

Remove the line from the fuel transfer pump and fuel filter head.

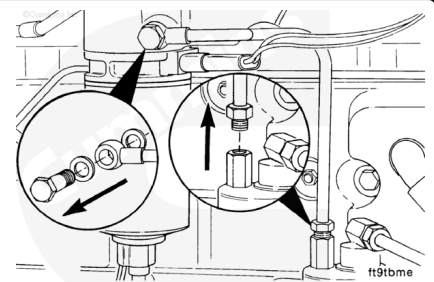


Bosch® In-Line Fuel Injection Pump Fuel Line


Remove the fuel line from the piston-style fuel transfer pump.

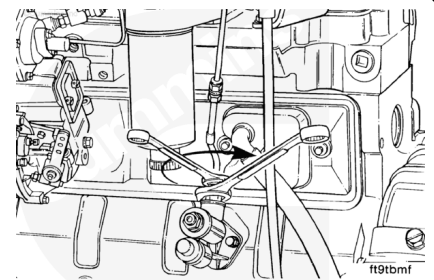

Remove the fuel drain manifold line at the filter head.

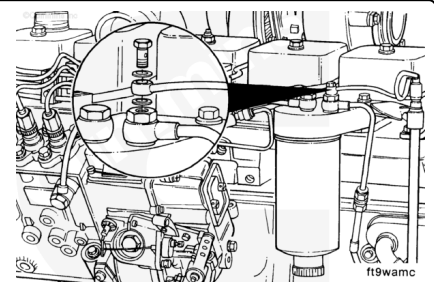


Remove the fuel line from the filter head.

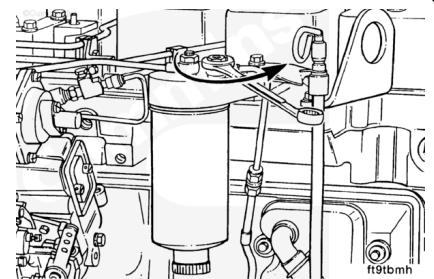


Fuel Injection Pump Supply Line - Distributor-Type Pumps

Remove the bleed screw banjo fitting, and complete the following steps:

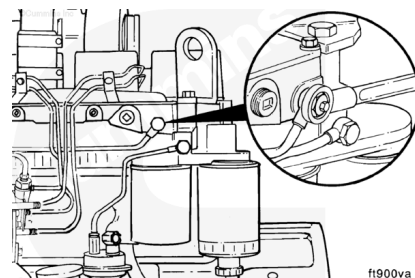


Remove the fuel line from the Bosch® fuel injection pump fitting.

Note : To prevent loosening the fuel injection pump inlet fitting, use two wrenches when removing the fuel supply line.

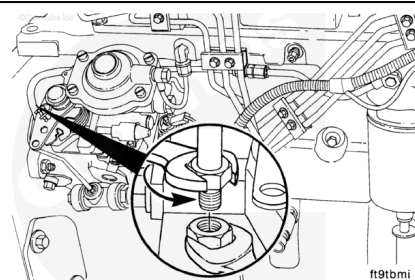


Remove the fuel supply line from the two Lucas CAV fuel injection pump fittings.

Note : Replace the seals in the fittings if the line is disassembled.

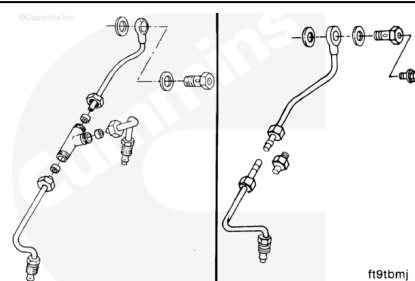

Pump Supply Line - Bosch® In-Line Pump

Remove the banjo capscrew and sealing washers at the filter head.

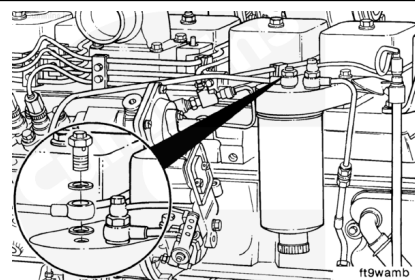

Remove the banjo capscrew and copper sealing washer at the fuel injection pump inlet.

