

Trainings ▾


Install

Front Gear Train

Assemble the injector and a new copper sealing washer.


Use **only** one copper washer.

Service Tip: A light coat of clean lubricating engine oil between the washer and injector can help to keep the washer from falling during installation.

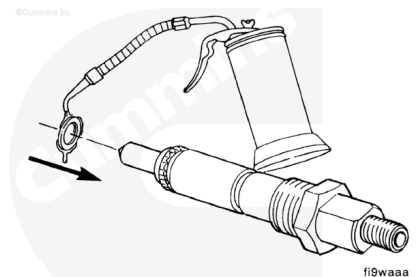


⚠ CAUTION ⚠


Early model injectors (pre-1991) have a 9-mm injector tip that can not be used in engines built in 1991 or later as these engines use a 7-mm injector tip.

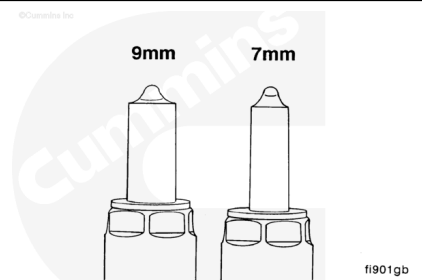

If the special adapter sleeve is installed onto the 7-mm injector tip, 7-mm injectors can be used in early model (9-mm) injector holes.

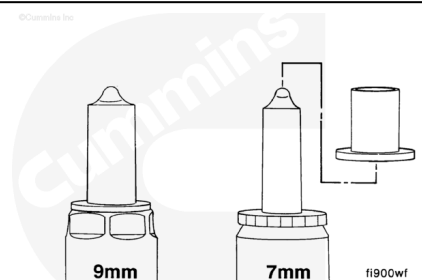


Apply a coat of anti-seize compound, Part Number 3824879, to the threads of the injector hold-down nut and between the top of the nut and the injector body.

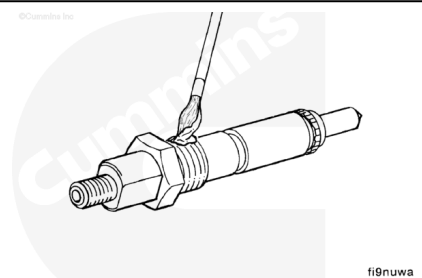

Note : Align the injector's protrusion with the notch in the bore.

Note : The present Bosch® injector has an o-ring located above the hold-down nut. After tightening the injector, be sure to push the o-ring into the groove.

Torque Value: 60 n•m [44 ft-lb]

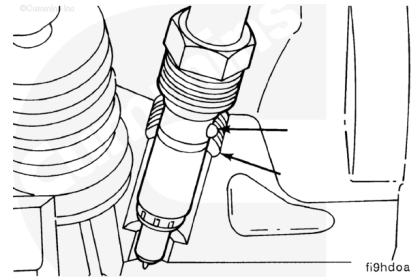

Rear Gear Train

Place the injector in the head in the proper orientation.

Install the injector hold-down and tighten.

Torque Value: 10 n•m [89 in-lb]

